

The **CONNECT SERIES** is a 1U X 19" rack mountable smart amplifier for use in professional AV integration projects.

It is made to mount directly into a standard AV rack, right out of the box. Additionally, you can rotate the rack ears 90 degrees either direction to mount the amplifier to walls, tables, and other surfaces.

 
Ensure your AC power source delivers 100-240VAC +/- 15% 50/60Hz before installing.

For full product details and specs, download the manual at the URL below or scan the QR code.


www.leaprofessional.com/downloads




In The Box



 2-Position Amphenol Anytek Output Connector
Qty 1 per Output Channel
LEA Part #: CPP10006-1
80/160W Only*

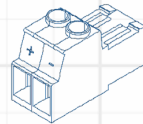

 
2-Position Amphenol Anytek Output Connector
Qty 1 per Output Channel
LEA Part #: CPP10001-1
350/700/1500W Only*

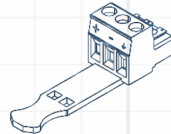


3-Position Amphenol Anytek Input Connector
Qty 1 per Input Channel
LEA Part #: CSP10001-1



 8-Pin I/O Input Connector
Qty 1
LEA Part #: CSP10004-1
350/700/1500W Only*



 Standard IEC Power Cord
Qty 1
LEA Part#: MOS10013-1
80/160/350/700W Only*



12-Pin I/O Input Connector
Qty 1
LEA Part #: CSP10005-1
80/160W Only*



32A Neutrik Powercon to L6-30p Power Cord
Qty 1
LEA Part#: MCC10057-1
1500W Only*

Front Panel Overview

Shark Fin LED



Green Fin
AC plugged in
Unit powered off



 
Blue Fin
AC plugged in
Unit powered on

Channel Status Indicators



Channel Fault – If fault LEDs are illuminated red, channel has shut down due to protected circuits.
Channel Thermal – If thermal LEDs are illuminated red, channel is at or close to over temp.
Channel Clip – A red LED indicates a clipping signal, an amber LED indicates channel is limiting.
Signal Presence – Green LED indicates -40dB of signal is present on that channel.
Channel Ready – Channel is ready to pass audio.

LCD Display

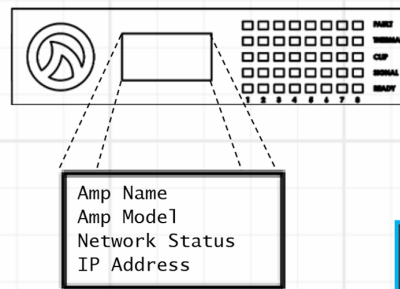

Training Videos



For more information on amplifier indicator states or troubleshooting, scan the QR code above to access our product training videos or email our technical support team at:

techsupport@leaprofessional.com

Back Panel Overview

For model-specific views and back panel explanations, scan the QR code to the right to view and download the user's manual.

Manual



1. IEC Type Inlet

For detachable IEC connector
100VAC-240VAC 50/60Hz

2. Power Button

ON/OFF button – status indicated by LED below.
(Green = AC, Blue = On)

3. External I/O Port

With remote ON/OFF & Fault Status

4. Channel Outputs

2-position output receptacles for up to 8 channels (depending on model)

5. Channel Attenuators

Attenuation pots for output level on each channel
(not on 80W/160W models)

6. Analog Balanced Inputs

3-position input receptacles for up to 8 channels
(depending on model)

7. Wi-Fi Access Point

 
Enable/Disable button with status LED
(AP=Blue, Wi-Fi=Green)

8. FAST 10/100MB Ethernet

Cat5 or Cat6 input for control, monitoring, & POE

9. Dante Inputs

Primary & Secondary
(Dante models only)

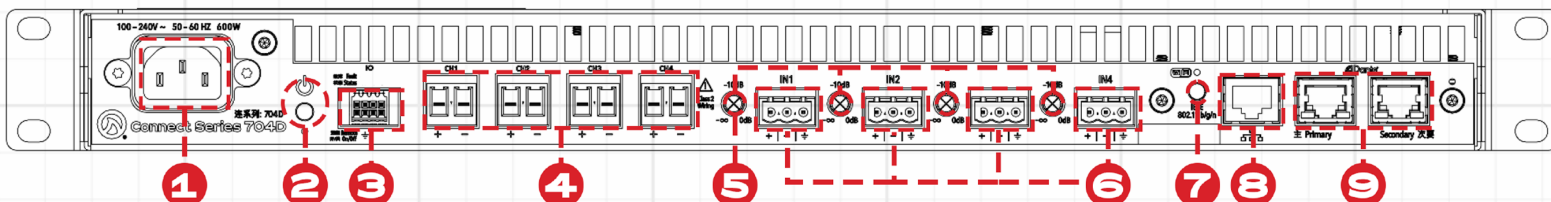

External I/O Port

Fault Status

Analog connection for quick amp fault status. Delivers 5V signal.

5V ON = no faults

 
5V OFF = fault present

Remote ON/OFF

This is wired directly to a switch or external contact closure for quick ON/OFF control of the amplifier.

OPEN = amp on

CLOSED = amp off

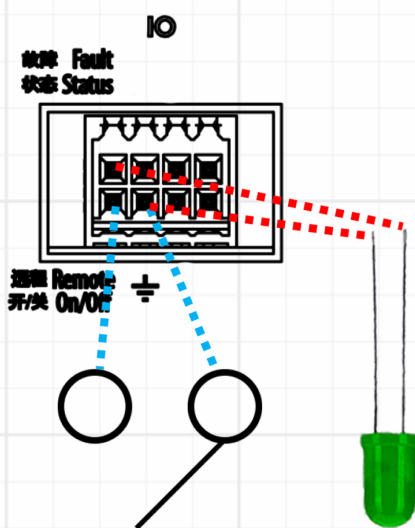


Smart Power Bridge

Smart Power Bridge gives you the benefits of a bridged output channel without sacrificing an amp channel.

You can Smart Power Bridge any one channel of an LEA Connect Series amplifier. For example, on a Connect Series 4 channel product, you can put channel 1 in Smart Power Bridge mode and get double the power output on that channel, channel 2 in 70V or 100V mode and have channel 3 and 4 in Low-Z mode.


Connecting to the Network

 There are three ways to choose from when connecting to a network. Scan the QR code for a detailed video walkthrough.

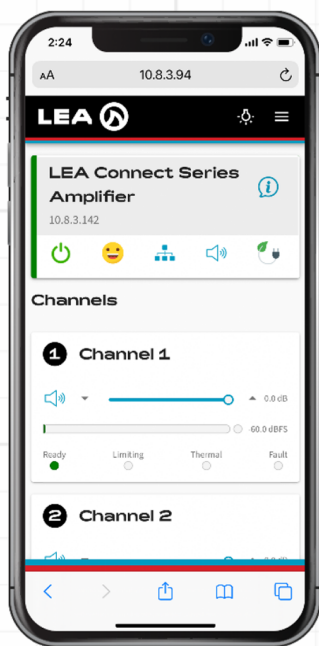

Access Point Mode

 1. Press Wi-Fi button on back of amp
2. The amp creates its own Access Point (LED above button turns blue) – find and connect to it on your device (Phone, tablet, PC)
3. Enter the amp's IP address into any web browser on your device (Phone, tablet, PC)

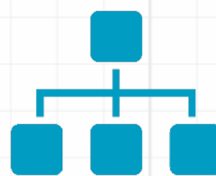

Wired Mode (Ethernet)

1. Connect to the wired network using Cat5 or Cat 6
2. Connect your device (Phone, tablet, PC) to the same network
3. Enter the amp's IP address into any web browser on your device (Phone, tablet, PC)



Wi-Fi Mode

1. Follow the steps in the AP or Wired instruction to the left
2. In "Network Settings", check the "Wi-Fi Enabled" box
3. Enter your Wi-Fi SSID & Password & click "Save"
4. From Wired mode, no action needed. From AP mode, press Wi-Fi button on back of amp
5. Connect your device to the same network, enter the amp's IP address in the web browser

Networking Training Video

 


Connecting to the Cloud

1. For remote control, visit: www.leaprofessional.cloud
2. Select "Register New Account" to create a Username & Password
3. Follow the prompts to log in to your Cloud Account
4. For more details, scan the QR code




Accessories



RCAF-2

 Female RCA to Amphenol Anytek 3-pin Connector
Qty 2 per order



XLR F

Female XLR to Amphenol Anytek 3-pin Connector
Qty 1 per order



MCC10061-1

32A Neutrik Powercon to L5-30P, 125V, 30A U.S. Power Cord for LEA Connect Series 1504 & 1504D.
Qty 1 Per Order



Rear Rack Support Bracket

80/160/350/700W Model LEA Part# - MFM10003-1
1500W Model LEA Part# - MFM10019-1
Qty 2 per order

Accessories Spec



Latest Firmware



www.leaprofessional.com

Training Videos



Product Registration



Website



Get More

For more information, training videos, product spec, downloads, and contact details, visit our website or scan the QR codes to the right.

www.leaprofessional.com

Manual

