



EclPendant JrFC

100W RGB+WarmWhite innovative
pendant light



USER MANUAL

Thank you for choosing PROLIGHTS

Please note that every PROLIGHTS product has been designed in Italy to meet quality and performance requirements for professionals and designed and manufactured for the use and application as shown in this document.

Any other use, if not expressly indicated, could compromise the good condition/operation of the product and/or be a source of danger.

This product is meant for professional use. Therefore, commercial use of this equipment is subject to the respectively applicable national accident prevention rules and regulations.

Features, specifications and appearance are subject to change without notice. Music & Lights S.r.l. and all affiliated companies disclaim liability for any injury, damage, direct or indirect loss, consequential or economic loss or any other loss occasioned by the use of, inability to use or reliance on the information contained in this document.

Product user manual can be downloaded from the website www.prolights.it , or can be inquired to the official PROLIGHTS distributors of your territory (https://www.prolights.it/sales_network.html).

Scanning the below **QR Code**, you will access the download area of the product page, where you can find a broad set of always updated technical documentation: specifications, user manual, technical drawings, photometrics, personalities, fixture firmware updates.



**Visit the download area
of the product page**



The PROLIGHTS Logo, PROLIGHTS names and all other trademark in this document pertaining to PROLIGHTS services or PROLIGHTS product are trademarks OWNED or licensed by Music & Lights S.r.l., its affiliates, and subsidiaries. PROLIGHTS is a registered trademark by Music & Lights S.r.l. All right reserved. Music & Lights – Via A. Olivetti, snc - 04026 - Minturno (LT) ITALY.

INDEX

SAFETY INFORMATION	02
1 - PACKAGING	05
PACKAGE CONTENT	05
OPTIONAL ACCESSORIES	05
2 - TECHNICAL DRAWING	05
3 - INSTALLATION	06
MOUNTING	06
4 - PRODUCT OVERVIEW	07
5 - CONNECTION TO THE MAINS SUPPLY	08
CONNECT AND DISCONNECT POWER FROM THE PRODUCT	08
CONNECTION TO MAINS POWER CABLE	08
CONNECTION TO MAINS VIA TERMINAL BLOCK	09
CONNECTION TO VDC VIA TERMINAL BLOCK	10
6 - CONTROL LINE CONNECTION	11
PROTOCOL SUPPORTED	11
CONNECTION OF THE CONTROL SIGNAL: DMX LINE	11
The product has XLR sockets for DMX input and output	11
INSTRUCTIONS FOR A RELIABLE DMX CONNECTION	11
CONNECTION DAISY CHAIN	11
CONNECTION OF THE DMX LINE	11
CONSTRUCTION OF THE DMX TERMINATION	12
DMX ADDRESSING	12
OPERATION AS A WIRELESS TRANSMITTER	12
IN TO WDMX	13
OPERATION AS A WIRELESS RECEIVER	13
WDMX TO DMX (RX)	13
CONNECTION TO DALI/DMX LINE TERMINATION	14
7 - CONTROL PANEL	15
DISPLAY AND BUTTONS LAYOUT	15
8 - MENU STRUCTURE	16
9 - SHORTCUT	19
10 - RDM FUNCTIONS	20
11 - DMX CHARTS	22
12 - ACCESSORIES INSTALLATION	29
HANGING BRACKET (CODE ECLPENDJRHGCRKBK/WH - OPTIONAL)	29
LENS (CODE ECLPENDJRLENS20/40/60 - OPTIONAL)	31
HALF / FULL SNOOT (CODE ECLPENDJRSNOOTBK, ECLPENDFSNOOTBK/WH - OPTIONAL)	32
CONCENTRIC LOUVRE / HONEYCOMB LOUVRE (CODE ECLPENDJRCLOUVREBK / WH, ECLPENDHLOUVREBK / WH - OPTIONAL)	33
WALL MOUNTING BRACKET (CODE ECLPENDWALLBRKBK/WH - OPTIONAL)	34
CEILING RECESSED KIT (CODE ECLPENDJRRECSKITBK/WH - OPTIONAL)	36
CEILING-MOUNTED KIT SURFACE (CODE ECLPENDJCEILKITBK/WH - OPTIONAL) ..	38
13 - MAINTENANCE	40
MAINTENANCE AND CLEANING THE PRODUCT	40
VISUAL CHECK OF PRODUCT HOUSING	40
TROUBLESHOOTING	41

SAFETY INFORMATION



WARNING!

- See <https://www.prolights.it/product/ECLPENDANTJRFC#download> for installation instructions.
- Please read carefully the instruction reported in this section before installing, powering, operating or servicing the product and observe the indications also for its future handling.



This unit is not for household, only professional applications.



Connection to mains supply

- The Connection to the mains supply must be carried out by a qualified electrical installer.
- Use only AC supplies 100-240V 50-60 Hz, the fixture must be electrically connected to ground (earth).
- Select the cable cross section in according with the maximum current draw of the product and the possible number of products connected at the same power line.
- The AC mains power distribution circuit must be equipped with magnetic+residual current circuit breaker protection.
- Do not connect it to a dimmer system; doing so may damage the product.



Protection and Warning against electrical shock

- Do not remove any cover from the product, always disconnect the product from AC power before servicing.
- Ensure that the fixture is electrically connected to ground (earth). And use only a source of AC power that complies with local building and electrical codes and has both overload and ground-fault (earth-fault) protection.
- Before using the fixture, check that all power distribution equipment and cables are in perfect condition and rated for the current requirements of all connected devices.
- Isolate the fixture from power immediately if the power plug or any seal, cover, cable, or other components are damaged, defective, deformed or showing signs of overheating.
- Do not reapply power until repairs have been completed.
- Refer any service operation not described in this manual to PROLIGHTS Service team or an authorized PROLIGHTS service center.



Installation

- Make sure that all visible parts of the product are in good visible condition before its use or installation.
- Make sure the point of anchorage is stable before positioning the projector.
- When suspending the fixture above ground level, secure it against failure of primary attachments by attaching a safety cable that is approved as a safety attachment for the weight of the fixture to the attachment point on the main frame of the product. In case the safety cable, enter in action, it needs to be replaced with a new one.
- Install the product only in well ventilated places.
- For non temporary installations, ensure that the fixture is securely fastened to a load-bearing surface with suitable corrosionresistant hardware.
- For a temporary installation with clamps, ensure that the quarter-turn fastener and/or screws are turned fully, and secured with a suitable safety cable.



Minimum distance of illuminated objects

- The projector needs to be positioned so that the objects hit by the beam of light are at least 0.5 meters (1.64 ft) from the lens of the projector.

T_a 45°C

Max operating ambient temperature (Ta)

- Do not operate the fixture if the ambient temperature (Ta) exceeds 45 °C (113 °F).

T_a -10°C



Minimum operating ambient temperature (T_a)

- Do not operate the fixture if the ambient temperature (T_a) is below -10 °C (14 °F).

Protection from burns and fire

- The exterior of the fixture becomes hot during use. Avoid contact by persons and materials.
- Ensure that there is free and unobstructed airflow around the fixture.
- Keep flammable materials well away from the fixture
- Do not expose the front glass to sunlight or any other strong light source from any angle. Lenses can focus the sun's rays inside the fixture, creating a potential fire hazard.
- Do not attempt to bypass thermostatic switches or fuses.



Indoor use

- This product is designed for indoor and dry environments.
- Do not use in wet location and do not expose the fixture to rain or moisture.
- Never use the fixture in places subject to vibrations or bumps.
- Make certain that no inflammable liquids, water or metal objects enter the fixture.
- Excessive dust, smoke fluid, and particle build up degrades performance, causes overheating and will damage the fixture.
- Damages caused by inadequate cleaning or maintenance are not covered by the product warranty.

T_c 70°C



Temperature of the external surface

- The surface of the fixture can reach up to 70 °C (158 °F) during operation. Avoid contact with people and materials.

Maintenance

- Warning! Disconnect the fixture from AC mains power and allow to cool for at least 10 minutes before handling.
- Only technicians who are authorized by PROLIGHTS or Authorised service partners are permitted to open the fixture.
- Users may carry out external cleaning, following the warnings and instructions provided, but any service operation not described in this manual must be referred to a qualified service technician.
- Important! Excessive dust, smoke fluid, and particle build up degrades performance, causes overheating and will damage the fixture. Damages caused by inadequate cleaning or maintenance is not covered by the product warranty.




Photobiological safety

- This device emits potentially dangerous optical radiation and is identified in the category of Risk Group 2 according to EN 62471.



Do not stare at the operating light source

- Do not look directly at the LED source during operation. It can be harmful to the eyes and skin.
- During Installation, operation and maintenance, be prepared for the fixture to light and move suddenly when connected to power.
- The device should be positioned so that prolonged staring into the luminaire at a distance closer than 7 m (22,96 ft) is not expected.

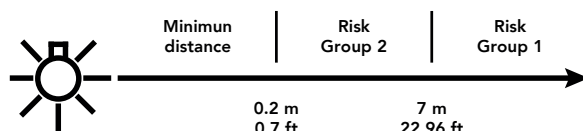



Disposal

- This product is supplied in compliance with European Directive 2012/19/EU – Waste Electrical and Electronic Equipment (WEEE). To preserve the environment please dispose/ recycle this product at the end of its life according to the local regulation.



The products to which this manual refers comply with:

- 2014/35/EU - Safety of electrical equipment supplied at low voltage (LVD).
- 2014/30/EU - Electromagnetic Compatibility (EMC).
- 2011/65/EU - Restriction of the use of certain hazardous substances (RoHS).
- 2014/53/EU - Radio Equipment Directive (RED).



Other approvals



1 - PACKAGING

PACKAGE CONTENT


- 1 x ECLPENDANTJRFC.
- 1 x 1,5 meters power cable (BARE END - SEETRONIC IP65 power connector).
- User Manual.

NOTE: no hanging bracket ECLPENDJRHGBRK on board to the fixture.

OPTIONAL ACCESSORIES

- ECLPENDJRLENS60/40/20: ECLPENDANTJR series lens.
- ECLPENDJRHGBRKBK/WH: hanging bracket for ECLPENDANTJR series, black/white.
- ECLPENDJRRECKITBK/WH: ceiling recessed kit for ECLPENDANTJR series, black/white.
- ECLPENDJRHSNOOTBK/WH: half snoot for ECLPENDANTJR series, black/white.
- ECLPENDJRFSNOOTBK/WH: full snoot for ECLPENDANTJR series, black/white.
- ECLPENDJRHLOUVBK/WH: honeycomb louvre for ECLPENDANTJR series, black/white.
- ECLPENDJRCLOUVBK/WH: concentric louvre for ECLPENDANTJR series, black/white.
- ECLPENDWALLBRKBK/WH: wall mounting bracket for ECLPENDANT and ECLPENDANTJR series, black/white.
- TOUR53415L03BK: dmx cable HC5340. CANS5MXX XLR 5p->CANS5FXX XLR (f) 5p.
- C6002A/B: slim aluminium clamp, 200 kg loading, 48-51 mm tubes, M10 bolt, silver/black.
- RSRRSR0630B: steel security cable for hanging bodies, inox steel shackle, silver/black.
- 9533FXWL03: ass. 3x2.5mm TH07 cable, SHUKO plug, MENAC3FXW socket.
- 9513FXW9513FXWL03: ass. 3x2.5mm TH07 cable, 16A 3p 230V CEE plug, MENAC3FXW socket.
- 958225958225L03: 3x2.5mm TH07. Cable, 16A 3p PwCon MXW, 16A 3p PwCon FXW.
- UPBOX1UP5: firmware uploader kit, USB IN, 5p XLR DMX OUT, DMX OUT.

2 - TECHNICAL DRAWING

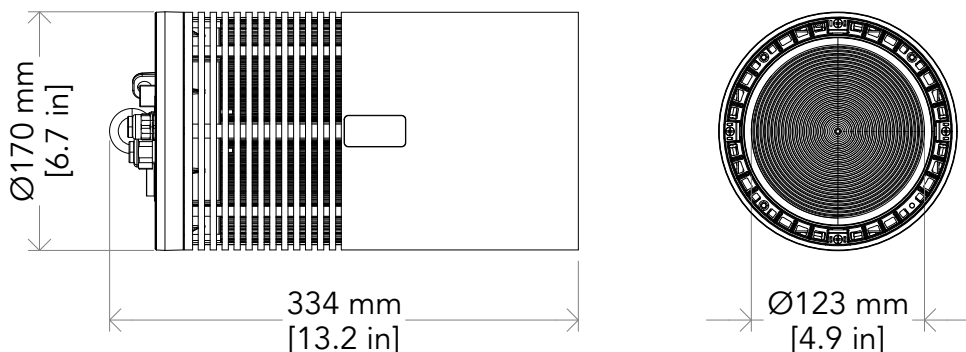

Weight: 5 kg - 11,02 lbs

Fig. 01

3 - INSTALLATION

MOUNTING

Check that the supporting structure can safely bear the weight of all installed fixtures, clamps, cables, auxiliary equipment, etc. and complies with locally applicable regulations.

When suspending the fixture above ground level, secure it against failure of primary attachments by attaching a safety wire that is approved as a safety attachment for the weight of the fixture to an anchor point on the product main frame.

Do not use removable parts or weak anchors for secondary attachment.

Warning! When clamping the fixture to a truss or other structure at any angle, use clamps of half-coupler type. Do not use any type of clamp that does not completely encircle the structure when fastened.

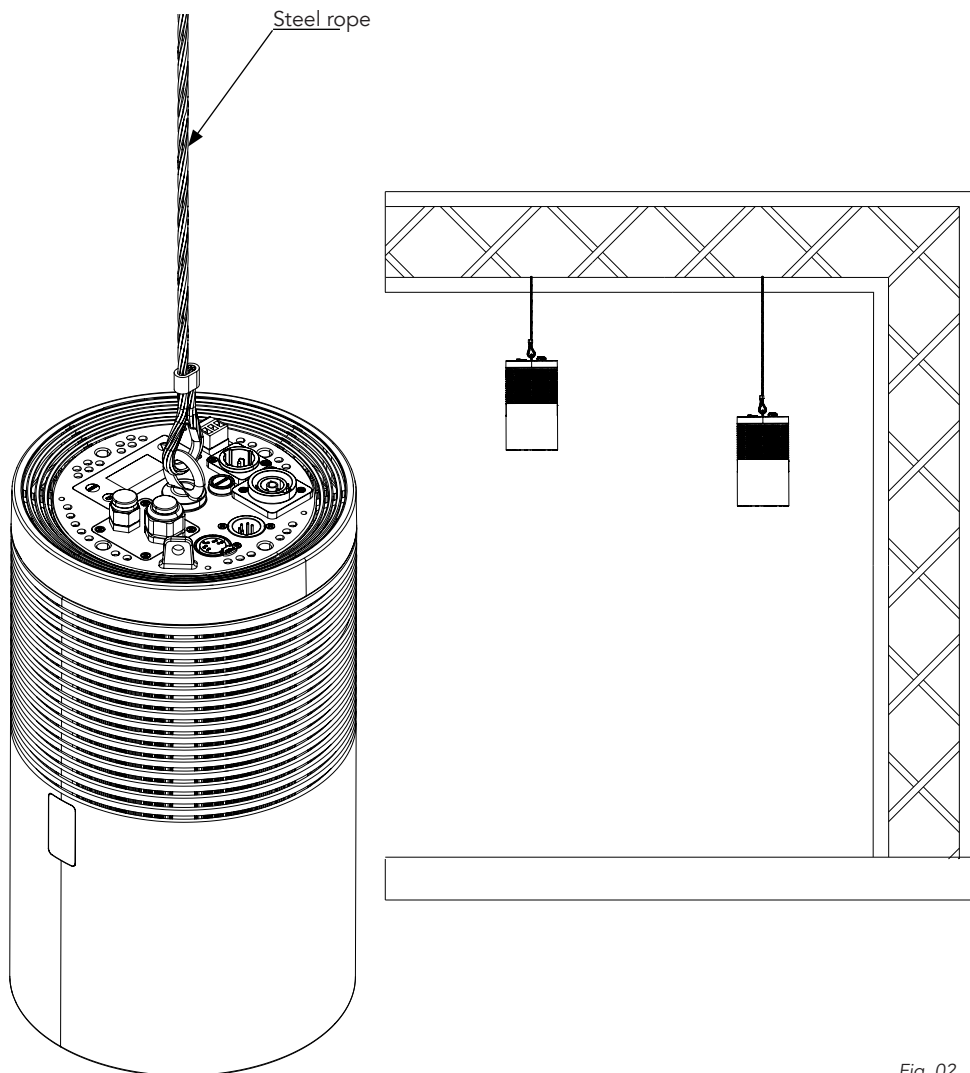


Fig. 02

4 - PRODUCT OVERVIEW

1. DALI/DMX signal.
2. EYEBOLT: for hanging pendant applications.
3. USER INTERFACE with display and buttons for access to the control panel functions.
4. POWER OUT: power output for connection of multiple units in series.
5. 48V DC input.
6. SAFETY EYE to attach safety cable.
7. POWER IN.
8. DMX OUT (5-p XLR): 1 = GND, 2 = sign-, 3 = sign+, 4 N/C, 5 N/C
9. DMX IN (5-p XLR): 1 = GND, 2 = sign-, 3 = sign+, 4 N/C, 5 N/C.
10. MAIN FUSE HOLDER: replace a burnt-out fuse by one of the same type only (250V, T3, 15A).
11. POWER IN: for connection to the Mains 100-240V~/50-60Hz.

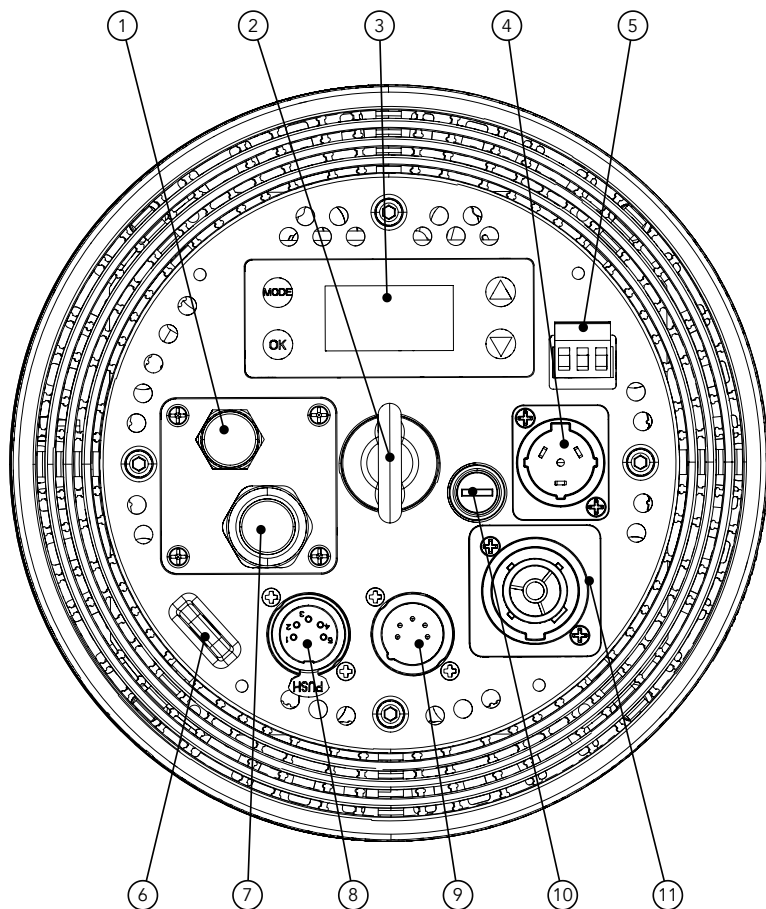


Fig. 03

5 - CONNECTION TO THE MAINS SUPPLY

WARNING: For protection from electric shock, the fixture must be earthed!
The product is equipped with auto-switching power supply that automatically adjusts to any 50-60Hz AC power source from 100-240 Volts. This fixture is also equipped with a DC Input rated 48V.

ATTENTION! Do not connect 100-240 Vac and 48 Vdc at same time!

CONNECT AND DISCONNECT POWER FROM THE PRODUCT

To apply and disconnect power to the product:

- Check that the product is installed and secured as indicated in the Safety Informations, and that personal safety will not be put at risk when the fixture lights up.
- Connect the power using one of the method described below (Power Cable, Mains Terminal Block or VDC Terminal Block) - Do not connect multiple sources at same time.
- The product is then ready for its operations and can be controlled through the available input signals on board. Check paragraph for DMX or DALI connection. Do not connect DMX and DALI at same time.
- To disconnect power from the product, disconnect the Mains from the socket.


CONNECTION TO MAINS POWER CABLE

If you need to install a power plug on the power cable to allow connection to power outlets, install a grounding-type (earthed) plug, following the plug manufacturer's instructions. If you have any doubts about proper installation, consult a qualified electrician.

The max power consumption is 112W.

Core (EU)	Core (US)	Connection	Plug terminal marking
Brown	Black	Live	L
Blue	White	Neutral	N
Yellow+green	Green	Earth	

CONNECTION TO MAINS VIA TERMINAL BLOCK

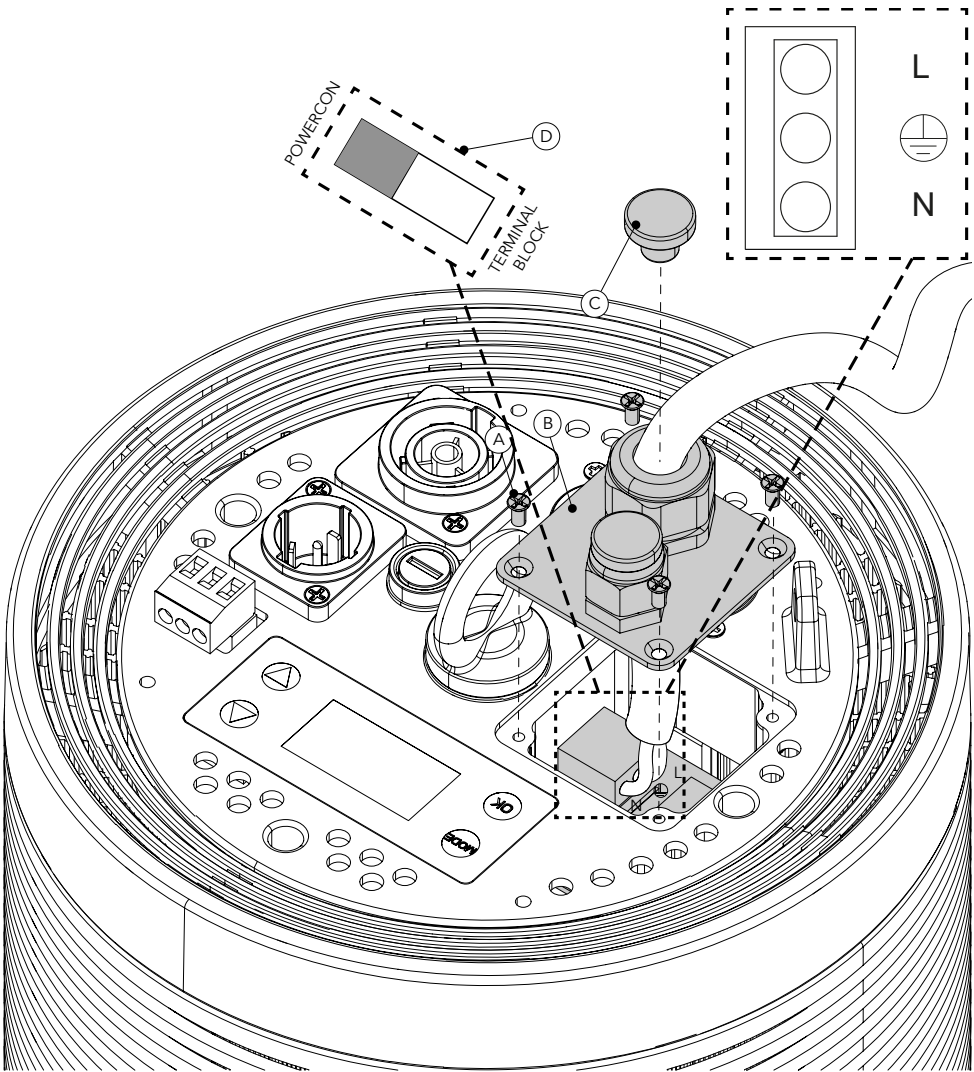

Loosen the four screws (A) and remove the plate with the cable glands (B). Loosen and remove the cap (C). Then insert the cable.

NOTE: to change the power supply from powercon to screw terminal blocks use the appropriate switch (D).

Fig. 04

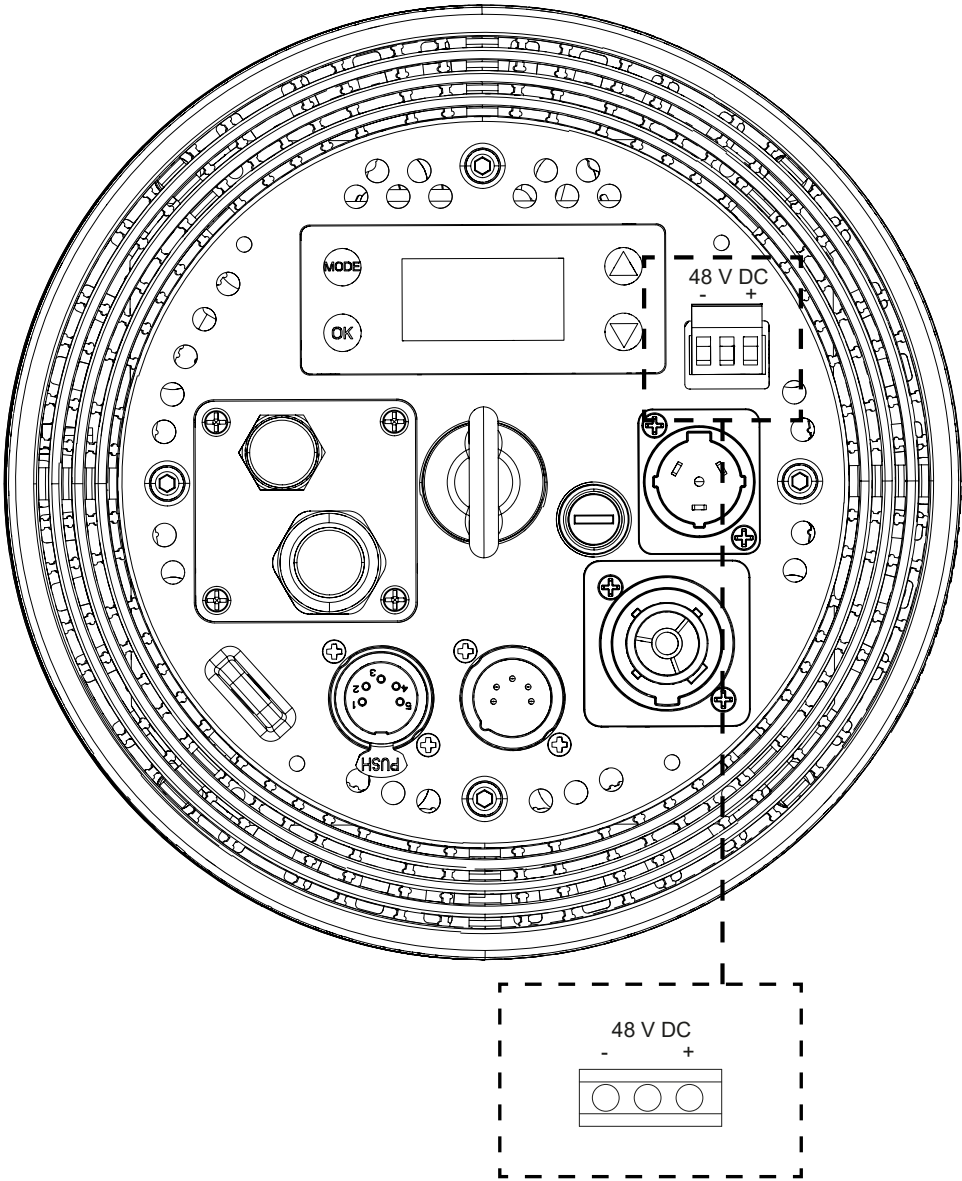


Fig. 05

6 - CONTROL LINE CONNECTION


PROTOCOL SUPPORTED

This fixture supports protocols as indicated in the following table.

DMX	RDM	WDMX	CRMX	DALI
DMX 512	RDM over DMX	G4S	CRMX Classic	DT-8 (Tc mode)
	RDM over CRMX	G3		
	RDM over WDMX			

CONNECTION OF THE CONTROL SIGNAL: DMX LINE

The product has XLR sockets for DMX input and output.
The default pin-out on both socket is as the following diagram:

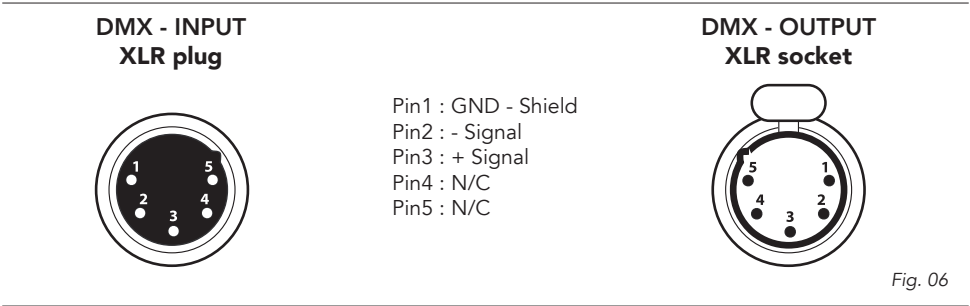

INSTRUCTIONS FOR A RELIABLE DMX CONNECTION

Use shielded twisted-pair cable designed for RS-485 devices: standard microphone cable cannot transmit control data reliably over long runs. 24 AWG cable is suitable for runs up to 300 meters (1000 ft). Heavier gauge cable and/or an amplifier is recommended for longer runs.
To split the data link into branches, use splitter-amplifiers in the connection line.
Do not overload the link. Up to 32 devices may be connected on a serial link.

CONNECTION DAISY CHAIN

Connect the DMX data output from the DMX source to the product DMX input (male connector XLR) socket.
Run the data link from the product XLR output (female connector XLR) socket to the DMX input of the next fixture.
Terminate the data link by connecting a 120 Ohm signal termination. If a splitter is used, terminate each branch of the link.
Install a DMX termination plug on the last fixture on the link.

CONNECTION OF THE DMX LINE

DMX connection employs standard XLR connectors. Use shielded pair-twisted cables with 120Ω impedance and low capacity.
The following diagram shows the connection mode:

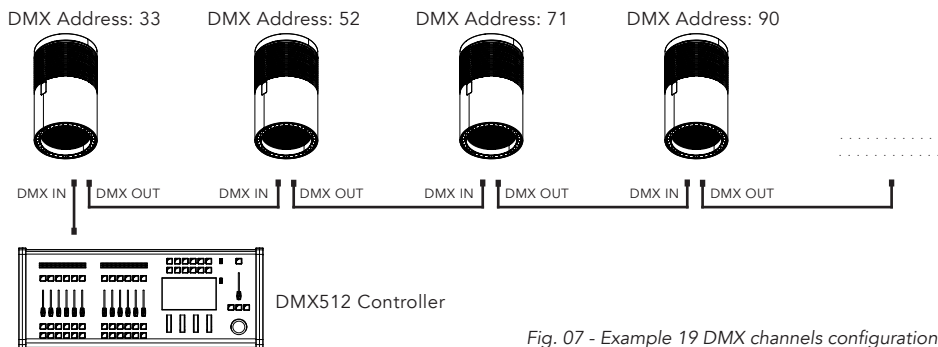


Fig. 07 - Example 19 DMX channels configuration

CONSTRUCTION OF THE DMX TERMINATION

The termination is prepared by soldering a 120Ω 1/4 W resistor between pins 2 and 3 of the male XLR connector, as shown in figure.

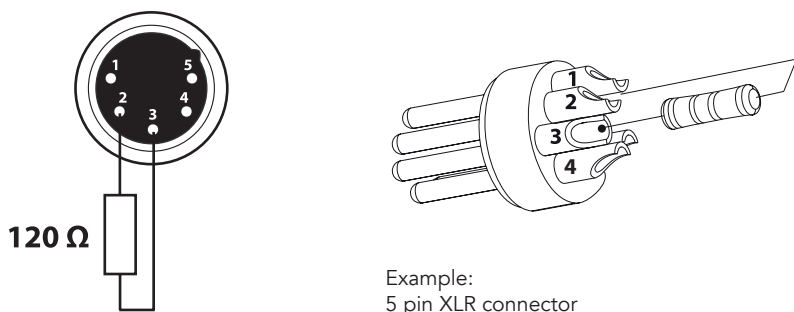


Fig. 08

DMX ADDRESSING

In order to start controlling the product via DMX, the first step is to select a DMX address, also known as the start channel, this is the first channel used to receive instructions from a DMX controller. If you wish to control the product individually, it is necessary to assign a different starting address channel to each fixture.

The number of channels occupied from the product depends on the DMX mode selected, so always verify the DMX Mode in the MENU before start addressing.

If you assign two fixtures the same address, they will be executing the same behaviour. Selecting the same address to multiple fixtures can be useful for diagnostic purposes and symmetrical control.

DMX addressing is limited to make it impossible to set the DMX address so high that you are left without enough control channels for the product.

To set the fixture's DMX address:

1. Press ENTER to open the main menu.
2. Reach the addressing menu, then select the DMX ADDRESS settings.
3. Select the address from 1 to 512 using the navigation arrows/buttons and confirm by pressing ENTER.
4. Press Menu to exit and return to the Home screen.

OPERATION AS A WIRELESS TRANSMITTER

ECLPENDANTJRFC can be used as wireless transmitter to transmit DMX signal to different wireless receivers. To use ECLPENDANTJRFC as wireless transmitter, please follow the procedure below:

1. Push ENTER button until you show CONNECT on display, then press ENTER button to confirm.

2. Use UP/DOWN buttons for select WIRELESS, then press ENTER to confirm.
3. Push ENTER button on WDMX ON/OFF function and enable it to ON.
4. Select WDMX mode and set it on Transmitter (please note that WDMX mode will be available only if WDMX ON/OFF is set to ON).
5. Ensure that the receiver units are not connected to any other transmitter. Please refer to "Reset the receiver" paragraph.
6. Enable TX LINK to ON to link transmitter to receivers (please note that TX LINK will be available only if WDMX mode is set to Transmitter).
 - The transmitter scans for all unlinked receivers for a period of about 5 seconds.
 - If the connection fails, check the position of the receiver.
 - The wireless icon on the receiver display indicates the received signal strength.

Unlinking the transmitter

Follow the procedure below to unlink the transmitter from all receivers connected with the unit.

1. Push ENTER button until you show CONNECT on display, then press ENTER button to confirm.
2. Use UP/DOWN buttons for select Wireless, then press ENTER to confirm.
3. Enable TX UNLINK to ON 8 (please note that TX UNLINK will be available only if WDMX mode is set to Transmitter).
 - All connected receivers will be unlinked.

IN TO WDMX

This function enable or disable the transmission through wireless of the DMX signal from the transmitter side to the receiver.

OPERATION AS A WIRELESS RECEIVER

ECLPENDANTJRFC can be used as wireless receiver connected to a wireless transmitter.

To use ECLPENDANTJRFC as wireless receiver, please follow the procedure below:

1. Push ENTER button until you show CONNECT on display, then press ENTER button to confirm.
2. Use UP/DOWN buttons for select Wireless, then press ENTER to confirm.
3. Push ENTER button on WDMX ON/OFF function and enable it to ON.
4. Select WDMX mode and set it on Receiver (please note that WDMX mode will be available only if WDMX ON/OFF is set to ON).
5. Enable RX RESET to ON to reset the receiver (please note that RX RESET will be available only if WDMX mode is set to Receiver).
6. On the transmitter, enable TX LINK to ON to link transmitter to the receivers.
7. If the connection is successful and DMX input is available the display on the receiver unit will show the DMX address. If DMX signal is not available, the display will show "No signal" but keeps the transmitter linked.
8. If the connection fails, check the position of the receiver.
9. The wireless icon on the receiver display indicates the received signal strength.

Reset the receiver


Follow the procedure below to reset the receiver.

1. Push MENU button until you show CONNECT on display, then press ENTER button to confirm.
2. Use UP/DOWN buttons for select Wireless, then press ENTER to confirm.
3. Enable RX RESET to ON.
 - The wireless icon on the receiver display indicates the received signal strength.

WDMX TO DMX (RX)

This function enable or disable the retransmission of the wireless DMX signal received through the DMX port on the receiver side.

CONNECTION TO DALI/DMX LINE TERMINATION

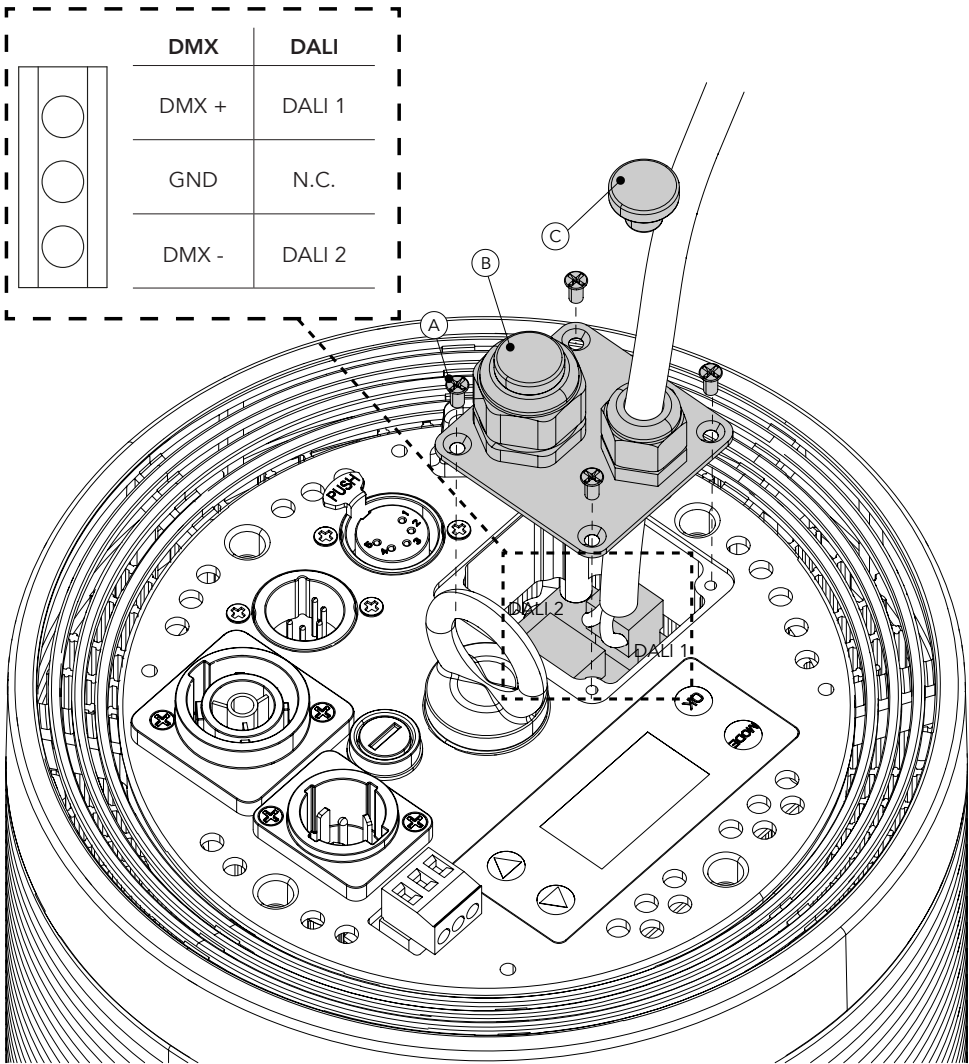

Loosen the four screws (A) and remove the plate with the cable glands (B). Loosen and remove the cap (C). Then insert the cable.

Fig. 09

7 - CONTROL PANEL

The product has a display and buttons for access to the control panel functions.

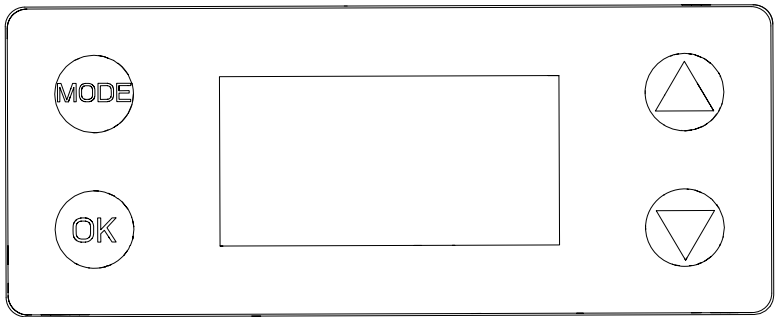


Fig. 10

DISPLAY AND BUTTONS LAYOUT

The product has a display and buttons for access to the control panel functions:

	Used to access the menu tree or to return a previous menu window.
	Browse upwards through the menu list and increases the numeric value displayed.
	Browse downwards through the menu list and decreases the numeric value displayed.
	Used to confirm the current menu or confirm the current function value or option within a menu.

8 - MENU STRUCTURE

The following chart describes the MENU tree of the product, the terms shown in **BOLD** indicates the default settings.

Nº	MENU	LEVEL 1	LEVEL 2	LEVEL 3	LEVEL 4	DESCRIPTION		
1	CONNECT	DMX ADDRESS	1-512			Set address used for Fixture.		
		DMX MODE	UNO	COLOR TEMPERATURE	2700K		Set DMX chart for Main Fixture.	
					2800K			
					3200K			
					3500K			
					4000K			
					4500K			
					5000K			
					5600K			
					6000K			
					6500K			
					...			
					10000K			
				COLOR MACRO	SEE TABLE OF COLOR MACRO			
				MANUAL COLORS	RED	000-255		
					GREEN	000-255		
					BLUE	000-255		
					WW	000-255		
			DUO	COLOR TEMPERATURE	2700K			
					2800K			
					3200K			
					3500K			
					4000K			
					4500K			
					5000K			
					5600K			
					6000K			
					6500K			
					...			
					...			
					10000K			
				COLOR MACRO	SEE TABLE OF COLOR MACRO			
				MANUAL COLORS	RED	000-255		
					GREEN	000-255		
					BLUE	000-255		
					WW	000-255		
			BASIC					
			STANDARD					
			EXTENDED					
			ADVANCED					

N°	MENU	LEVEL 1	LEVEL 2	LEVEL 3	LEVEL 4	DESCRIPTION
1	CONNECT	WIRELESS	WDMX ON/OFF	ON		Enable/Disable the wireless card.
				OFF		
			WDMX MODE	TRANSMITTER		Allows to choose whether to set the wireless on the Transmitter or Receiver.
				RECEIVER		WDMX mode is unlocked only if WDMX ON / OFF is ON.
			TX LINK			TX link unlock Nwhen the unit is set as a transmitter
			TX UNLINK	ON		Disconnect the transmitter from all receivers.
				OFF		TX unlink unlocks only if WDMX mode is on transmitter
			RX RESET	ON		Total reset of the receiver.
				OFF		RX reset unlocks only if WDMX mode is receiver.
			IN TO WDMX (TX)	ON		Enable/Disable the transmission of the dmx from the transmitter to the receiver via wdmx.
				OFF		
			WDMX TO DMX (RX)	ON		Enable/Disable the retransmission of the DMX from the receiver to the other units connected by cable to the receiver itself.
				OFF		
2	SETUP	SCREEN	BACKLIGHT	ON		Allows you to select the timing after that display will switch automatically off when unactive.
				10S		
				20S		
				30S		
			FLIP DISPLAY	ON		Allows you to rotate the display by 180°.
				OFF		
			KEY LOCK	ON		Allows you lock the buttons on the control panel by a password. Press following combinations (password) in order to access to the user menu: UP, DOWN, UP, DOWN, ENTER.
				OFF		
			TEMPERATURE UNIT	°C		Allows you to choose Temperature unit showed in home screen.
				°F		
		TRANSFER CONFIGURATION	WITHOUT DMX ADDRESS			To transfer the same menu settings of one fixtures to all the other in the daisy chain, including or not the dmx address. Transfer configuration also works via WDMX.
			WITH DMX ADDRESS			
3	ADVANCED	FULL ON MODE	HB			HB - High Brightness Mode, delivering the full output on every primary color. Studio - Calibrated white output at 6000K, when all primary colors are set to full.
			STUDIO			
		DIMMER CURVE	LINEAR			Select Dimmer curve.
			S-CURVE			
			SQUARE LAW			
			INVERSE SQUARE LAW			
		DIMMER SPEED	AUTO			Select Dimmer speed.
			FAST			
			MEDIUM			
			SLOW			

N°	MENU	LEVEL 1	LEVEL 2	LEVEL 3	LEVEL 4	DESCRIPTION
3	ADVANCED	SPEKTRA CALIBRATION	ON			CCT and colors are fully calibrated, working in the common color space definition set by Spektra. This means that output of multiple fixtures will match with no visible differences. Color Saturation is slightly reduced.
			PURE COLORS			CCT is calibrated, giving perfect white matching across multiple fixtures, but primary and secondary colors are calibrated to their native color space which allows maximum color saturation. The closer you move towards white, the more closely multiple fixtures will match each other's output. The further you move away from white and the closer you move towards saturated color, the less closely multiple fixtures will match each other's output.
			OFF			CCT doesn't guarantee High CRI Values and color output of one fixture may or may not closely match that of other fixtures.
		LED FREQUENCY	600HZ			Select LED PWM frequency.
			1200HZ			
			2000HZ			
			4000HZ			
			6000HZ			
			25KHZ			
			36KHZ			
			40KHZ			
		DMX FAULT	HOLD			Define the behaviour of fixture in case of DMX signal lost.
			BLACKOUT			
			STAND ALONE			
			EMERGENCY			
		TUNGSTEN EMULATION	ON			Enable/Disable Tungsten emulation.
			OFF			
		OUTPUT CONTROL	CONSTANT			See table at the end of the Menu for Power behaviour.
			DYNAMIC			
		FACTORY RELOAD	ON			Reload fixture with Standard settings.
			OFF			
4	INFORMATION	DEVICE TIME	FIXTURE HOURS	<99999H>		To check the total working hours of the unit.
			CURRENT HOURS	<99999H>		To check the current working hours of the unit.
			SOURCE HOURS	<99999H>		To see the total operating hours of the LED source.
			AC POWER ON CYCLE	<300>		To see the power cycles of the machine.
			MAINTENANCE TIME	ELAPSED TIME		To choose and reset unit maintenance warning hours.
				ALERT PERIOD	10 - 300	
		POWER CONSUMPTION				Show actual power consumption.
		TEMPERATURE	NEAR SOURCE TEMP, DRIVER PCB TEMP, LED PCB TEMP,...			To see the unit temperature.
		WIRELESS QUALITY				To check the wireless quality.

9 - SHORTCUT

SHORTCUTS		
Keys	Mode	Description
MENU + ENTER then power on	Clear All	Clear all value of functions + factory default
UP + DOWN after power on	Flip Display	Directly flip display without enter inside menu
DOWN + ENTER	Internal menu	The menu "Internal" with special displays and editors for service can be used

10 - RDM FUNCTIONS

The product can communicate using RDM (Remote Device Management) protocol over a DMX512 Networks.

RDM is a bi-directional communications protocol for use in DMX512 control systems, it is the open standard for DMX512 device configuration and status monitoring.

The RDM protocol allows data packets to be inserted into a DMX512 data stream without affecting existing non-RDM equipment. It allows a console or dedicated RDM controller to send commands to and receive messages from specific fixtures.

The PIDs in the following tables are supported in the product.

RDM is also available on Wireless and Tiny's Downstead must be enabled in its custom PIDs to work.

Category	Parameter	Value	GET	SET
Product Information	SUPPORTED_PARAMETERS	0x0050	x	
	PARAMETER_DESCRIPTION	0x0051	x	
	PRODUCT_DETAIL_ID_LIST	0x0070	x	
	DEVICE_MODEL_DESCRIPTION	0x0080	x	
	MANUFACTURER_LABEL	0x0081	x	
	DEVICE_LABEL	0x0082	x	x
	FACTORY_DEFAULTS	0x0090	x	x
DMX512 Setup	DMX_PERSONALITY	0x00E0	x	x
	DMX_PERSONALITY_DESCRIPTION	0x00E1	x	
	DMX_START_ADDRESS	0x00F0	x	x
	SLOT_INFO	0x0120	x	
	SLOT_DESCRIPTION	0x0121	x	
	DEFAULT_SLOT_VALUE	0x0122	x	
Sensors	SENSOR_DEFINITION	0x0200	x	
	SENSOR_VALUE	0x0201	x	x
Dimmer Settings	DIMMER_INFO	0x0340	x	
	CURVE	0x0343	x	x
	CURVE_DESCRIPTION	0x0344	x	x
	OUTPUT_RESPONSE_TIME	0x0345	x	x
	OUTPUT_RESPONSE_TIME_DESCRIPTION	0x0346	x	
	MODULATION_FREQUENCY	0x0347	x	x
	MODULATION_FREQUENCY_DESCRIPTION	0x0348	x	
Power/Lamp Settings	DEVICE_HOURS	0x0400	x	x
	LAMP_HOURS	0x0401	x	x
	LAMP_STRIKES	0x0402	x	x
	LAMP_STATE	0x0403	x	x
	LAMP_MODE	0x0404	x	x
	DEVICE_POWER_CYCLES	0x0405	x	x
Display Settings	DISPLAY_INVERT	0x0500	x	x
Control	IDENTIFY_MODE	0x1040	x	x

Manufacturer Specific PIDs

Parameter	PID	GET	SET	Value	Description
DMX FAULT	0x82DD	x	x	0-3	0: Hold 1: Blackout 2: Stand Alone 3: Emergency
MASTER/SLAVE	0x8211	x	x	0-2	0: Master DMX 1: Master NO DMX 2: Slave
STAND ALONE MODE	0x82EC	x	x	0-2	0:Stand Alone EFFECTS 1:Stand Alone CCT PRESET 2:Stand Alone MANUAL WW/CW
EFFECTS	0x8209	x	x	0-5	DEFAULT: 5
EFFECTS SPEED	0x8210	x	x	0-100	DEFAULT: 100
FULL ON	0x8217	x	x	0-1	0:HB 1:Studio
SPEKTRA CALIBRATION	0x822F	x	x	0-2	0:ON 1:Full Colors 2:OFF
FIXED COLOR	0x82BE	x	x	0-14	0: R 1: G 2: B 3: W 4: RG 5: RB 6: RW 7: GB 8: GW 9: BW 10:RGB 11:RGW 12:RBW 13:GBW 14:RGBW
WHITE PRESET	0x82BF	x	x	0-16	0: 2700K 1: 2800K 2: 3200K 3: 3500K 4: 4000K ... 16:10000K
MANUAL RED	0x82C0	x	x	0-255	DEFAULT: 255
MANUAL GREEN	0x82C1	x	x	0-255	DEFAULT: 255
MANUAL BLUE	0x82C2	x	x	0-255	DEFAULT: 255
MANUAL WHITE	0x82C3	x	x	0-255	DEFAULT: 255
COLOR MACRO	0x82ED	x	x	0-66	DEFAULT: 0
OUTPUT CONTROL	0x830C	x	x	0-1	0:Constant Output 1:Dynamic Output
TUNGSTEN EMULATION	0x82BC	x	x	0-1	0:ON 1:OFF
CURRENT HOURS	0x82C5	x		0-1	
POWER CONSUMPTION(AC 220V)	0x82DE	x		0-1	
MAINTENANCE TIME:ALERT PERIOD	0x82DF	x	x	10-300	DEFAULT: 300
MAINTENANCE TIME:ELAPSED TIME	0x82E0	x	x	0-1	DEFAULT: 0
ERROR MESSAGES	0x82EA	x		0-1	0:No Error 1:Temperature Too High
CLEAN ALL DATA	0x82C8	x	x	0-1	0: No 1: Yes

11 - DMX CHARTS

RDM Model ID: 0xD101

RDM Personality ID List

ID	DMX Mode	Footprint
1	UNO	1CH
2	DUO	2CH
3	BASIC	5CH
4	STANDARD	9CH
5	EXTENDED	12CH
6	ADVANCED	19CH

PARAMETER	MODE					
	UNO	DUO	BASIC	STANDARD	EXTENDED	ADVANCED
DIMMER	1	1	1	1	1	1
DIMMER FINE		2		2	2	2
CCT					3	3
CCT FINE						4
TINT					4	5
CROSSFADE					5	6
RED			2	3	6	7
RED FINE						8
GREEN			3	4	7	9
GREEN FINE						10
BLUE			4	5	8	11
BLUE FINE						12
WHITE			5	6	9	13
WHITE FINE						14
COLOR MACRO				7	10	15
EFFECT						16
EFFECT SPEED						17
STROBE				8	11	18
CONTROL				9	12	19

Dimmer					
Function	8 bit value		16 bit value		Note
	From	To	From	To	
Dimmer	0	255	0	65535	Default @ 0

Strobe					
Function	8 bit value		16 bit value		Note
	From	To	From	To	
Open	0	1	-	-	Default @ 255
Strobe from Slow to Fast	2	62	-	-	
Open	63	64	-	-	
Pulse In from slow to fast	65	125	-	-	
Open	126	127	-	-	
Pulse Out from slow to fast	128	188	-	-	
Open	189	190	-	-	
Random from slow to fast	191	251	-	-	
Open	252	255	-	-	

CCT						
Function		8 bit value		16 bit value		Note
CCT From	CCT To	From	To	From	To	
2800	2900	0	4	0	910	Default @ 0
2900	3000	4	7	910	1820	
3000	3100	7	11	1820	2731	
3100	3200	11	14	2731	3641	
3200	3300	14	18	3641	4551	
3300	3400	18	21	4551	5461	
3400	3500	21	25	5461	6371	
3500	3600	25	28	6371	7282	
3600	3700	28	32	7282	8192	
3700	3800	32	35	8192	9102	
3800	3900	35	39	9102	10012	
3900	4000	39	43	10012	10923	
4000	4100	43	46	10923	11833	
4100	4200	46	50	11833	12743	
4200	4300	50	53	12743	13653	
4300	4400	53	57	13653	14563	
4400	4500	57	60	14563	15474	
4500	4600	60	64	15474	16384	
4600	4700	64	67	16384	17294	
4700	4800	67	71	17294	18204	
4800	4900	71	74	18204	19114	
4900	5000	74	78	19114	20025	
5000	5100	78	81	20025	20935	
5100	5200	81	85	20935	21845	
5200	5300	85	89	21845	22755	
5300	5400	89	92	22755	23665	
5400	5500	92	96	23665	24576	
5500	5600	96	99	24576	25486	
5600	5700	99	103	25486	26396	
5700	5800	103	106	26396	27306	

CCT					
Function	8 bit value		16 bit value		Note
CCT From	CCT To	From	To	From	To
5800	5900	106	110	27306	28216
5900	6000	110	113	28216	29127
6000	6100	113	117	29127	30037
6100	6200	117	120	30037	30947
6200	6300	120	124	30947	31857
6300	6400	124	128	31857	32768
6400	6500	128	131	32768	33678
6500	6600	131	135	33678	34588
6600	6700	135	138	34588	35498
6700	6800	138	142	35498	36408
6800	6900	142	145	36408	37319
6900	7000	145	149	37319	38229
7000	7100	149	152	38229	39139
7100	7200	152	156	39139	40049
7200	7300	156	159	40049	40959
7300	7400	159	163	40959	41870
7400	7500	163	166	41870	42780
7500	7600	166	170	42780	43690
7600	7700	170	174	43690	44600
7700	7800	174	177	44600	45510
7800	7900	177	181	45510	46421
7900	8000	181	184	46421	47331
8000	8100	184	188	47331	48241
8100	8200	188	191	48241	49151
8200	8300	191	195	49151	50061
8300	8400	195	198	50061	50972
8400	8500	198	202	50972	51882
8500	8600	202	205	51882	52792
8600	8700	205	209	52792	53702
8700	8800	209	213	53702	54613
8800	8900	213	216	54613	55523
8900	9000	216	220	55523	56433
9000	9100	220	223	56433	57343
9100	9200	223	227	57343	58253
9200	9300	227	230	58253	59164
9300	9400	230	234	59164	60074
9400	9500	234	237	60074	60984
9500	9600	237	241	60984	61894
9600	9700	241	244	61894	62804
9700	9800	244	248	62804	63715
9800	9900	248	251	63715	64625
9900	10000	251	255	64625	65535

Tint					
Function	8 bit value		16 bit value		Note
	From	To	From	To	
-25% to 0	0	127	-	-	Default @ 128 Linear tint correction from -0.25 to +0.25
Neutral	128	128	-	-	
0 to 25%	129	255	-	-	

Crossfade from CCT to Color					
Function	8 bit value		16 bit value		Note
	From	To	From	To	
Linear Crossfade	0	255	0	65535	Default @ 255 / 65535

Red					
Function	8 bit value		16 bit value		Note
	From	To	From	To	
0 - 100%	0	255	0	65535	Default @ 255 / 65535

Green					
Function	8 bit value		16 bit value		Note
	From	To	From	To	
0 - 100%	0	255	0	65535	Default @ 255 / 65535

Blue					
Function	8 bit value		16 bit value		Note
	From	To	From	To	
0 - 100%	0	255	0	65535	Default @ 255 / 65535

White					
Function	8 bit value		16 bit value		Note
	From	To	From	To	
0 - 100%	0	255	0	65535	Default @ 255 / 65535

Color Macro					
Function	8 bit value		16 bit value		Note
	From	To	From	To	
No Function	0	1	-	-	Default @ 0
Red	2	3	-	-	
Green	4	5	-	-	
Blue	6	7	-	-	
Cyan	8	9	-	-	
Magenta	10	11	-	-	
Yellow	12	13	-	-	
Dirty White	14	15	-	-	
Alice Blue	16	17	-	-	
Congo Blue	18	19	-	-	
Dark Steel Blue	20	21	-	-	
Deep Lavender	22	23	-	-	
Lilac Ting	24	25	-	-	
Daylight Blue	26	27	-	-	
Flame Red	28	29	-	-	
Bastard Amber	30	31	-	-	
Deep Orange	32	33	-	-	
Pale Gold	34	35	-	-	
Apricot	36	37	-	-	
Bright Blue	38	39	-	-	
Primary Green	40	41	-	-	
Special Lavender	42	43	-	-	
Pale Lavender	44	45	-	-	
Deep Golden Amber	46	47	-	-	
Medium Blue	48	49	-	-	
Bright Pink	50	51	-	-	
Mauve	52	53	-	-	
Dark Green	54	55	-	-	
Lee Green	56	57	-	-	
Dark Blue	58	59	-	-	
Light Blue	60	61	-	-	
Steel Blue	62	63	-	-	
Medium Blue-Green	64	65	-	-	
Peacock Blue	66	67	-	-	
Magenta	68	69	-	-	
Dark Pink	70	71	-	-	
Middle Rose	72	73	-	-	
Light Salmon	74	75	-	-	
English Rose	76	77	-	-	
Light Rose	78	79	-	-	
Orange	80	81	-	-	
Deep Amber	82	83	-	-	
Straw	84	85	-	-	
Light Amber	86	87	-	-	
Spring Yellow	88	89	-	-	
Dark Yellow Green	90	91	-	-	
Just Blue	92	93	-	-	
Sky Blue	94	95	-	-	
Lavender	96	97	-	-	
Light Lavender	98	99	-	-	
Pink Carnation	100	101	-	-	

Color Macro					
Function	8 bit value		16 bit value		Note
	From	To	From	To	
Medium Pink	102	103	-	-	
Light Pink	104	105	-	-	
Sunset Red	106	107	-	-	
Dark Amber	108	109	-	-	
Gold Amber	110	111	-	-	
Medium Amber	112	113	-	-	
Fire	114	115	-	-	
Surprise Peach	116	117	-	-	
Straw Tint	118	119	-	-	
Medium Yellow	120	121	-	-	
Lee Minus Green	122	123	-	-	
Pale Gold	124	125	-	-	
Orange	126	127	-	-	
Deep Straw	128	129	-	-	
Rose Purple	130	131	-	-	
Deep Purple	132	133	-	-	
Soft Green	134	135	-	-	
Reserved for future use	136	209	-	-	
2700K	210	211	-	-	
2800K	212	213	-	-	
3000K	214	215	-	-	
3200K	216	217	-	-	
3400K	218	219	-	-	
3600K	220	221	-	-	
3800K	222	223	-	-	
4000K	224	225	-	-	
4200K	226	227	-	-	
4400K	228	229	-	-	
4600K	230	231	-	-	
4800K	232	233	-	-	
5000K	234	235	-	-	
5200K	236	237	-	-	
5400K	238	239	-	-	
5600K	240	241	-	-	
6000K	242	243	-	-	
6500K	244	245	-	-	
7000K	246	247	-	-	
8000K	248	249	-	-	
9000K	250	251	-	-	
10000K	252	253	-	-	
FULL ON	254	255	-	-	

Effects					
Function	8 bit value		16 bit value		Note
	From	To	From	To	
No Function	0	10	-	-	Default @ 0
FX 1	11	60	-	-	
FX 2	61	110	-	-	
FX 3	111	160	-	-	
FX 4	161	210	-	-	
FX 5 (FX 1 -4)	211	255	-	-	


Effect Speed					
Function	8 bit value		16 bit value		Note
	From	To	From	To	
From slow to fast	0	255	-	-	Default @ 128

Control Channel					
Function	8 bit value		16 bit value		Note
	From	To	From	To	
No Function	0	1	-	-	Default @ 0
DIMMER CURVE LINEAR	2	3	-	-	Hold 3s to take function
DIMMER CURVE S-CURVE	4	5	-	-	
DIMMER CURVE SQUARE LAW	6	7	-	-	
DIMMER CURVE INVERSE SQUARE LAW	8	9	-	-	
DIMMER SPEED AUTO	10	11	-	-	
DIMMER SPEED FAST	12	13	-	-	
DIMMER SPEED MEDIUM	14	15	-	-	
DIMMER SPEED SLOW	16	17	-	-	
LED FREQUENCY 600HZ	18	19	-	-	
LED FREQUENCY 1200HZ	20	21	-	-	
LED FREQUENCY 2000HZ	22	23	-	-	
LED FREQUENCY 4000HZ	24	25	-	-	
LED FREQUENCY 6000HZ	26	27	-	-	
LED FREQUENCY 25KHZ	28	29	-	-	
LED FREQUENCY 36KHZ	30	31	-	-	
LED FREQUENCY 40KHZ	32	33	-	-	
DMX FAULT HOLD	34	35	-	-	
DMX FAULT BLACKOUT	36	37	-	-	
DMX FAULT STAND ALONE	38	39	-	-	
DMX FAULT EMERGENCY	40	41	-	-	
SPEKTRA CALIBRATION ON	42	43			
SPEKTRA CALIBRATION PURE COLORS	44	45			
SPEKTRA CALIBRATION OFF	46	47			
Reserved	48	49	-	-	
STAND ALONE MASTER DMX	50	51	-	-	
STAND ALONE MASTER NO DMX	52	53	-	-	
STAND ALONE SLAVE	54	55	-	-	
STAND ALONE EFFECTS	56	57	-	-	
STAND ALONE STATIC COLORS	58	59	-	-	
STAND ALONE WHITE PRESETS	60	61	-	-	
STAND ALONE COLOR MACROS	62	63	-	-	
STAND ALONE MANUAL COLORS	64	65	-	-	
TUNGSTEN EMULATION ON	66	67	-	-	
TUNGSTEN EMULATION OFF	68	69	-	-	
OUTPUT CONTROL CONSTANT	70	71	-	-	
OUTPUT CONTROL DYNAMIC	72	73	-	-	
Reserved	74	253	-	-	
Reset all channel controlled	254	255	-	-	


12 - ACCESSORIES INSTALLATION

HANGING BRACKET (CODE ECLPENDJRHGBRKBK/WH - OPTIONAL)

1

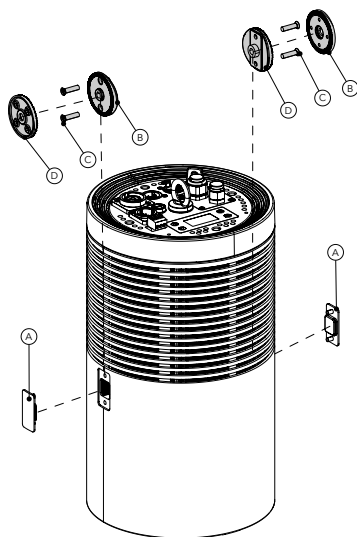

2

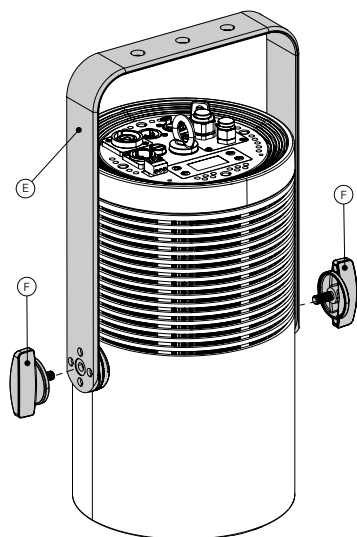

Place fixture on a stable surface.

1. Remove rubber caps (A). Fix spacer disks (B) using the M5 screws (C), in the holes of the unit.
2. Align inner mounting disc (D) and hanging bracket (E) with the previously mounted spacer disks and then insert and rotate knobs (F) clockwise to secure hanging bracket in desired position.

Please turn!




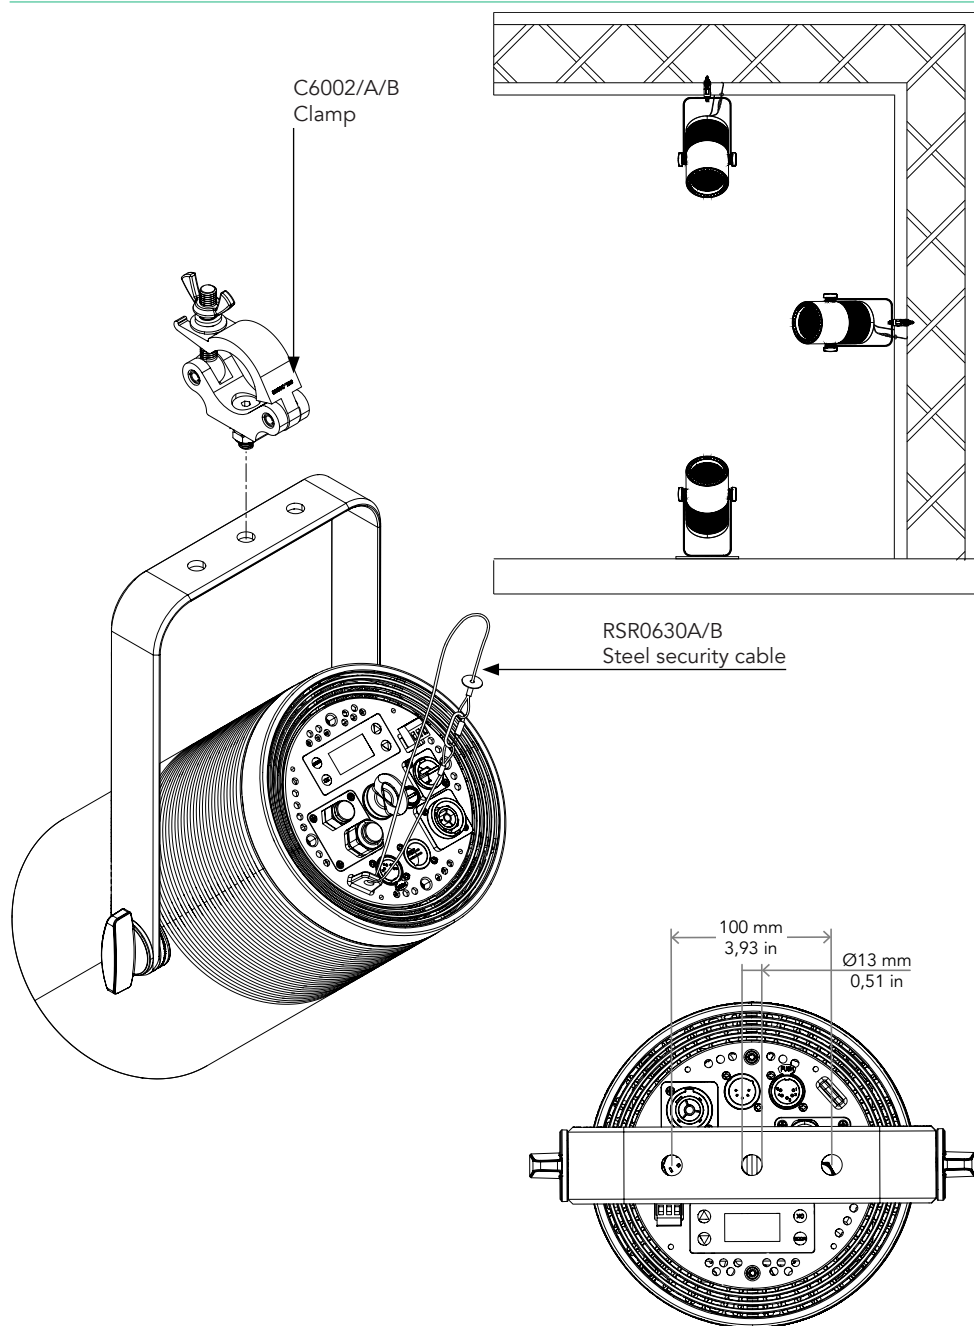


Fig. 11

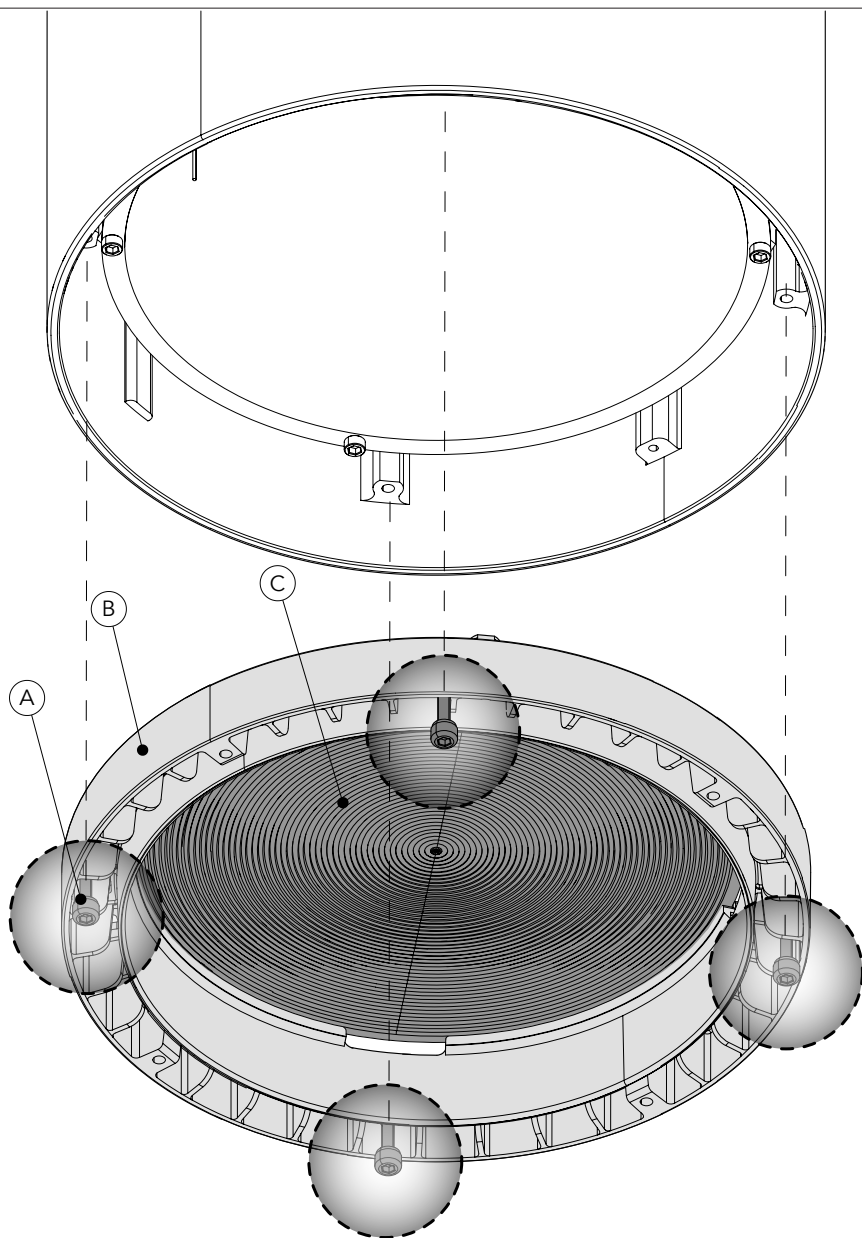


Place fixture on a stable surface.


- Loosen the three M4 (A) screws and remove the lens holder frame (B).
- Remove the lens (C) and its reflect cup to insert the desired one.
- Check lens is positioned correctly and then secure lens holder frame.

Fig. 12

1 - HALF SNOOT

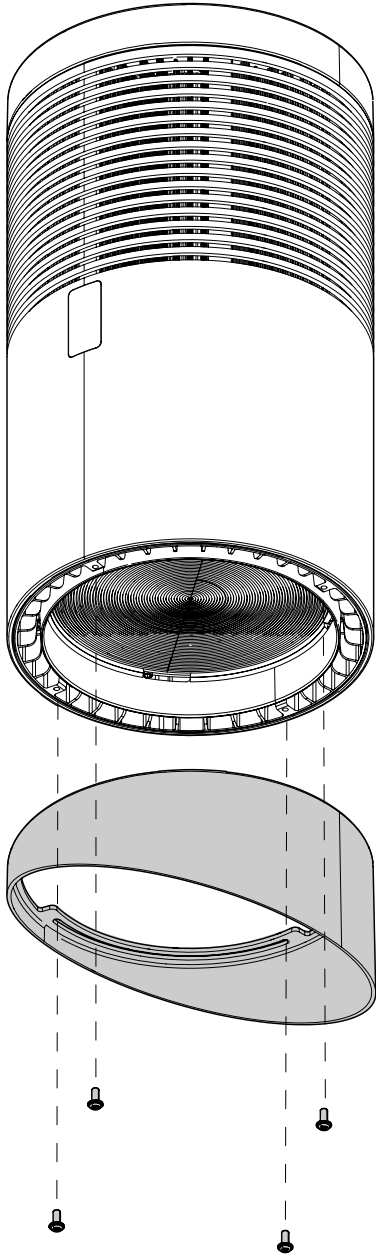


2 - FULL SNOOT

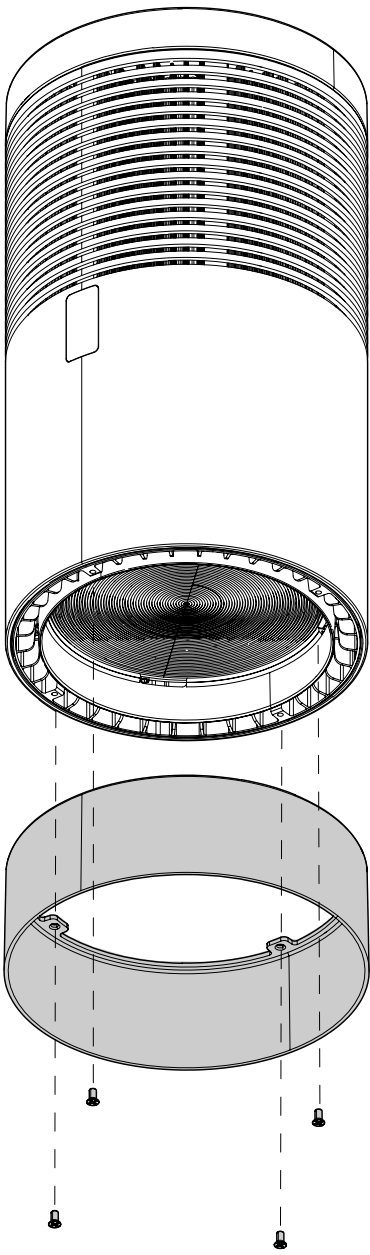


Attach half / full snoot to the fixture lens holder frame and secure with the four M4 screws.

Fig. 13

1 - LOUVRE

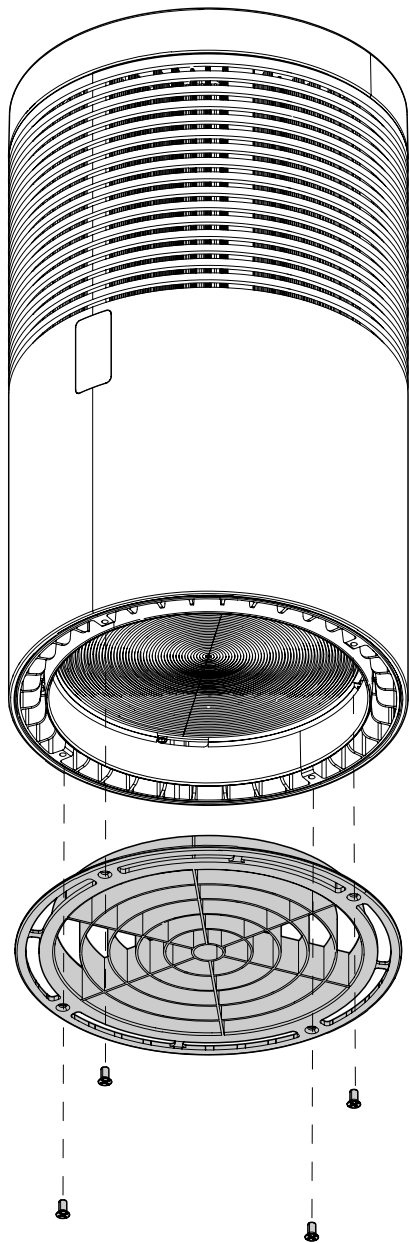



2 - HONEYCOMB

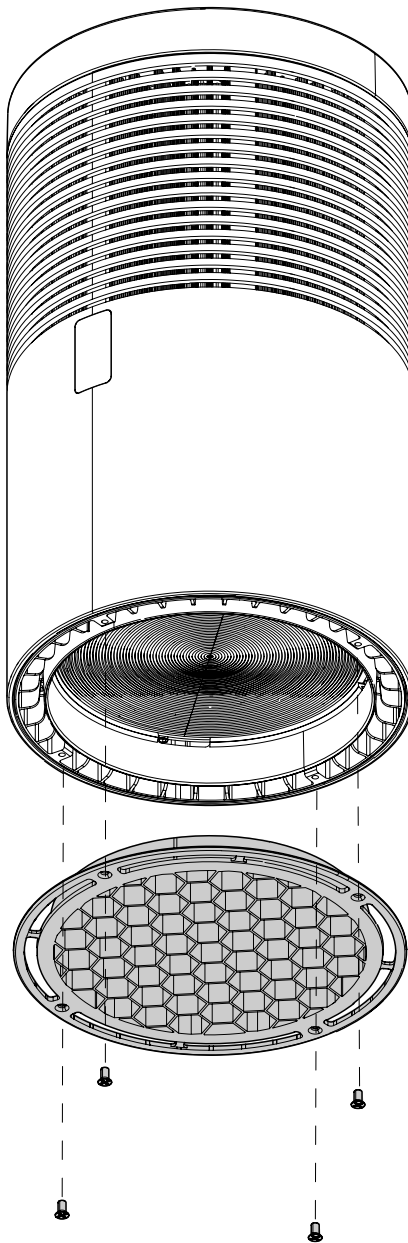

Attach louvre / honeycomb accessory to the fixture lens holder frame and secure with the four M4 screws.

Fig. 14

WALL MOUNTING BRACKET (CODE ECLPENDWALLBRKBK/WH - OPTIONAL)

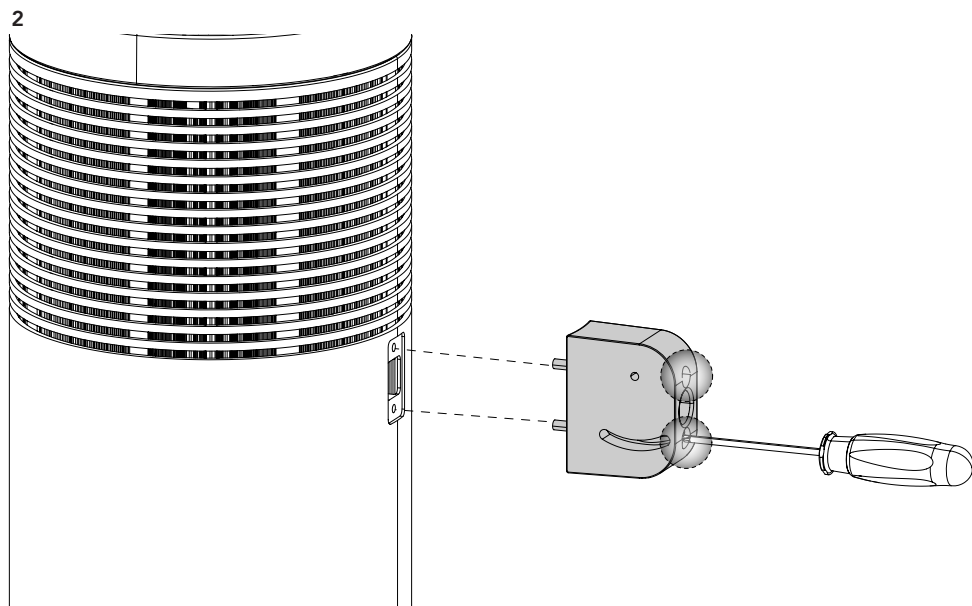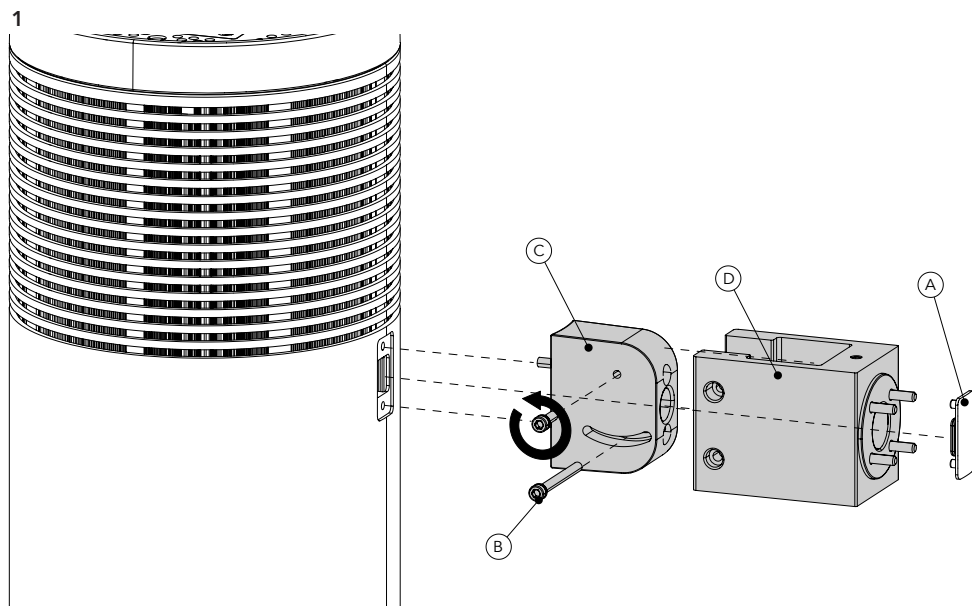


Remove the rubber from the desired side (A).

1. Remove the rubber (A) from the fixture.
2. Unscrew the screws (B) to remove the body (C) from the body (D). Attach the body to the fixture and secure it with the two screws.


Please turn!



3

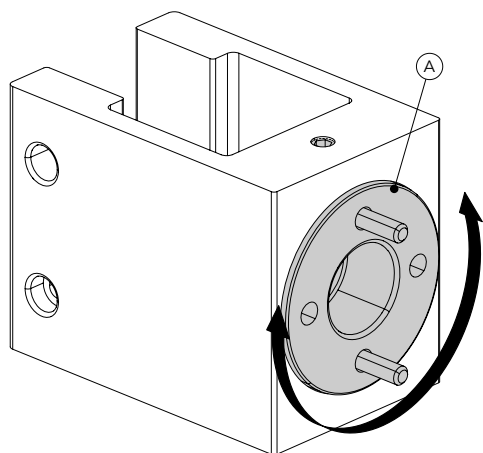


4

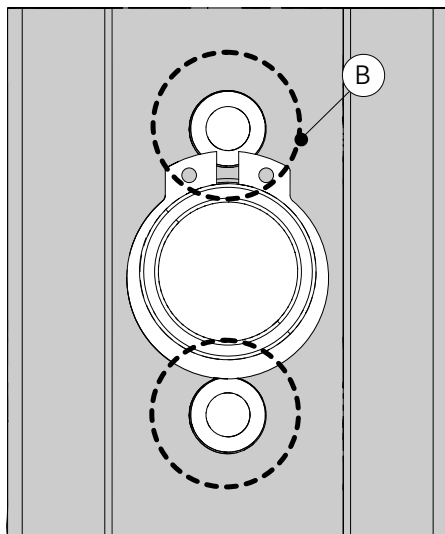

Rotate the disc (A) and align the two holes (B). Then insert the screws for wall fixing, and rotate it 90° again and insert the other two screws. Tighten the four screws in total.


5

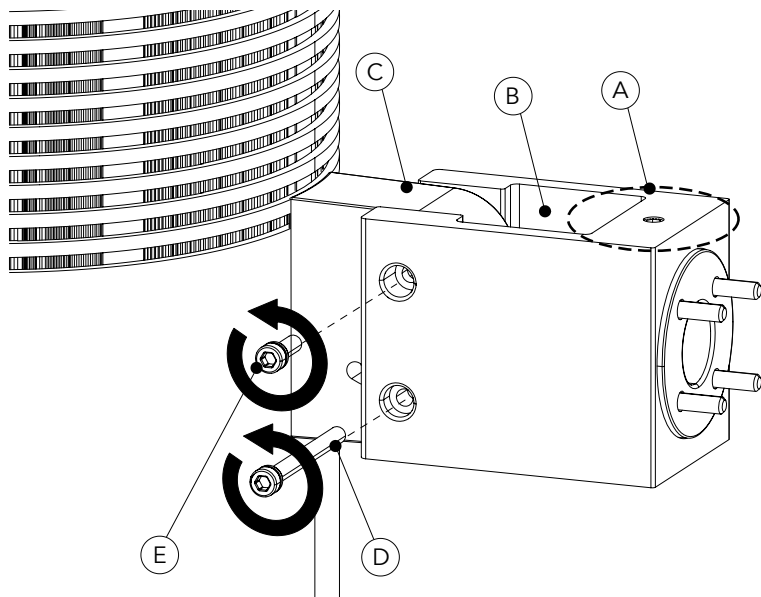


- Tighten the screw (A) to block the horizontal tilt.
 - Attach the two bodies (B-C) and secure it with the two screws (D-E).
- NOTE: use the screw (D) to fix the vertical tilt.

Fig. 15

A

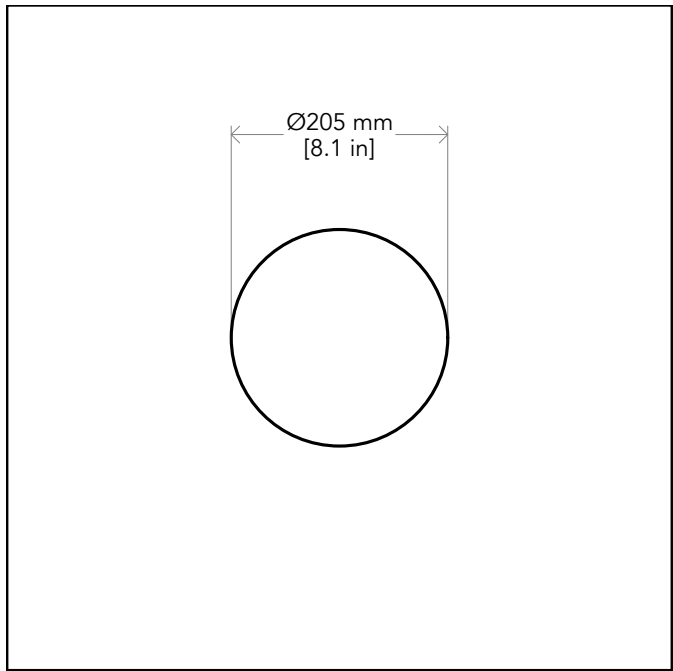


B

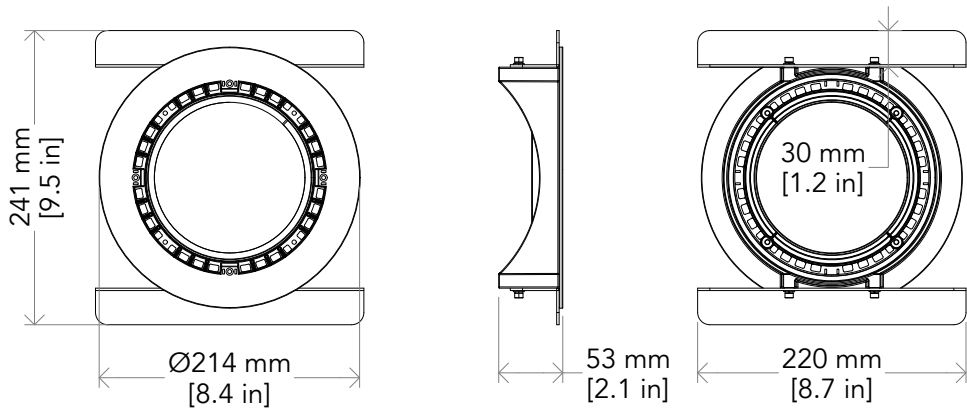

Measurements for cuts on the panels (1) and of Ceiling Recessed kit (2).

Please turn! ➡

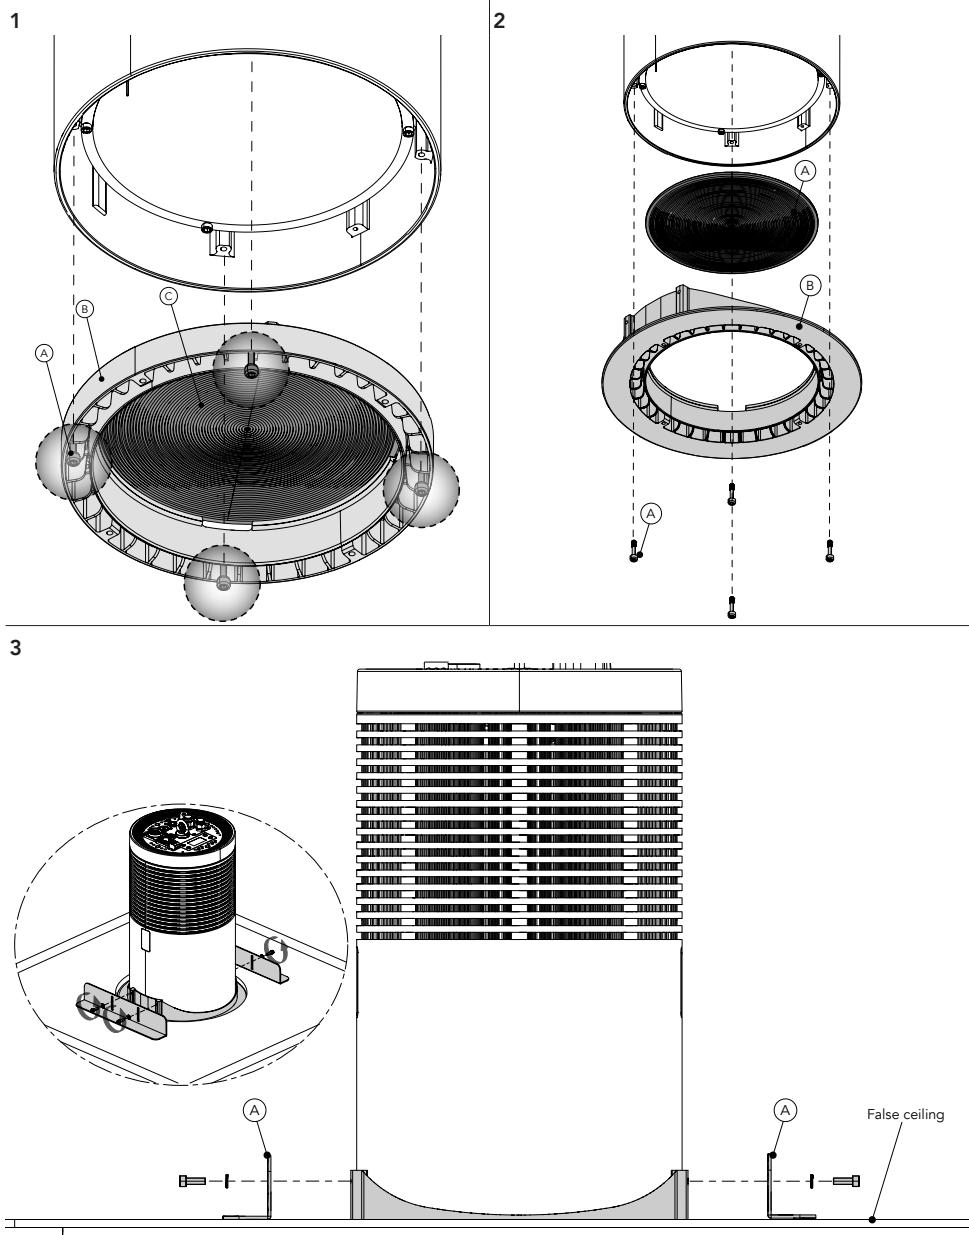


Place fixture on a stable surface.


1. Loosen the four M4 screws (A) and remove the lens holder frame (B), lens (C) and its filter.
2. Mount the lens (A) on the accessory flange Ceiling Recessed kit (B). Attach the accessory flange (B) to the fixture and secure it with the four M4 screws (C).
3. Fix the two parts (A) on the panel and tighten using the screws (B).

Fig. 16

A

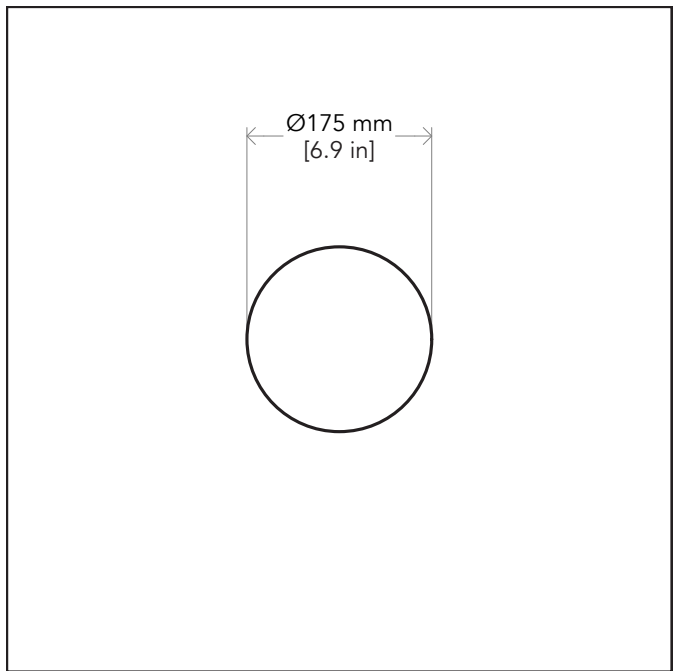


B

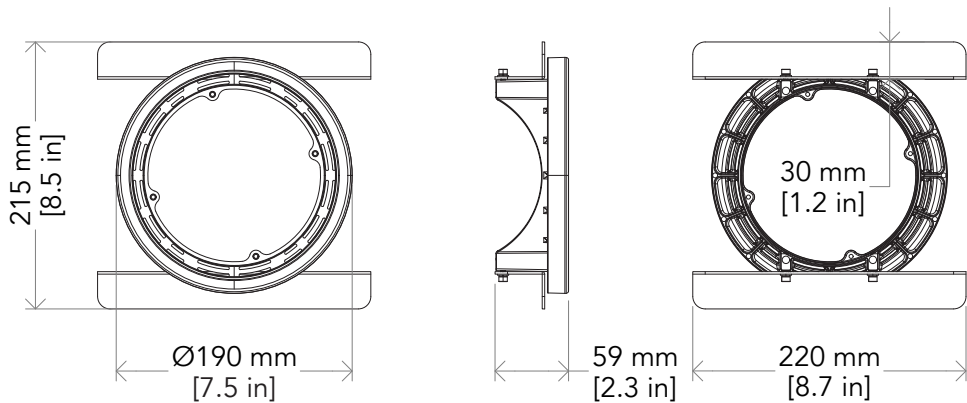


Measurements for cuts on the panels (1) and of Ceiling Mounted kit (2).

Please turn! ➡

1

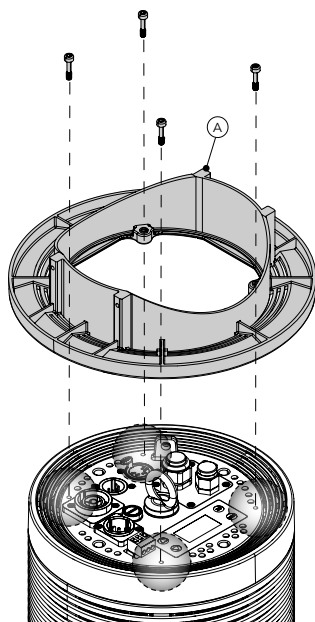

2

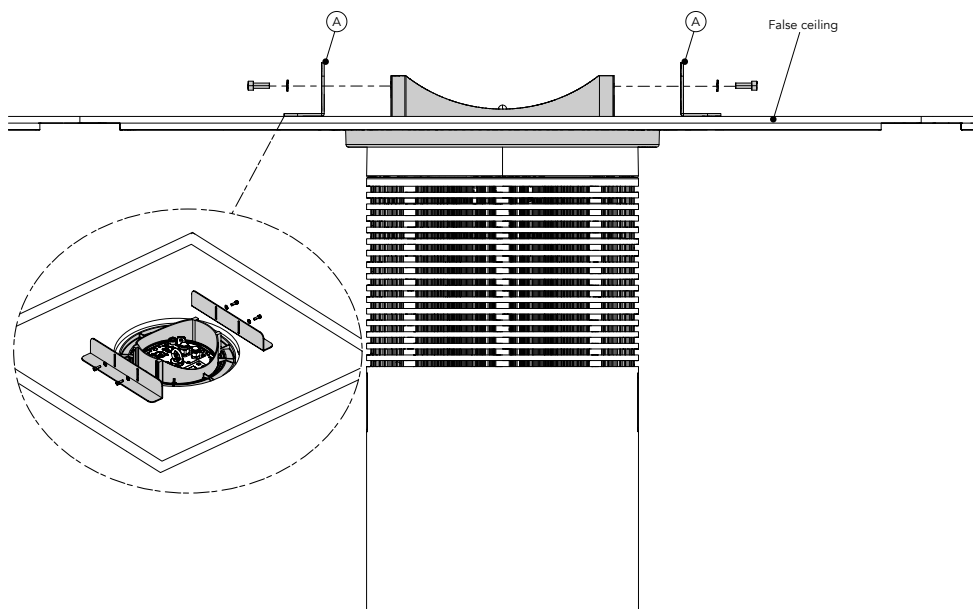

Place fixture on a stable surface.

1. Attach the accessory flange (A) to the fixture and secure it with the four M4 screws.
2. Fix the two parts (A) on the panel and tighten using the screws.

Fig. 17

13 - MAINTENANCE

MAINTENANCE AND CLEANING THE PRODUCT

WARNING: Disconnect from the mains before starting any maintenance work

It is recommended to clean the front at regular intervals, from impurities caused by dust, smoke, or other particles to ensure that the light is radiated at maximum brightness.

- For cleaning, disconnect the main plug from the socket. Use a soft, clean cloth moistened with a mild detergent. Then carefully wipe the part dry. For cleaning other housing parts use only a soft, clean cloth. Never use a liquid, it might penetrate the unit and cause damage to it.
- The user must clean the product periodically to maintain optimum performance and cooling. The user may also upload firmware (product software) to the fixture via the DMX signal input port or USB port using firmware and instructions from PROLIGHTS.
- The frequency of such maintenance operations is to be performed according to various factors, such as the amount of the use and the condition of the installation environment (air humidity, presence of dust, salinity, etc.). It is recommended that the product is subject to annual service by a qualified technician for special maintenance involving at least the following procedures:
- General cleaning of internal parts.
- For all the parts subject to friction, using lubricants specifically supplied by PROLIGHTS.
- General visual check of the internal components, cabling, mechanical parts, etc.
- Electrical, photometric and functional checks; eventual repairs.
- Cleaning the lenses. Only use neutral soap and water to clean the lenses, then dry it carefully with a soft, non-abrasive cloth.

WARNING: the use of alcohol or any other detergent could damage the lenses.

- All other service operations on the product must be carried out by PROLIGHTS, its approved service agents or trained and qualified personnel.
- It is PROLIGHTS policy to apply the strictest possible calibration procedures and use the best quality materials available to ensure optimum performance and the longest possible component lifetimes. However, optical components are subject to wear and tear over the life of the product, resulting in gradual changes in colours over many thousands of hours of use. The extent of wear and tear depends heavily on operating conditions and environment, so it is impossible to specify precisely whether and to what extent performance will be affected. However, you may eventually need to replace optical components if their characteristics are affected by wear and tear after an extended period of use and if you require fixtures to perform within very precise optical and colour parameters.
- Do not apply filters, lenses or other materials on lenses or other optical components. Use only accessories approved by PROLIGHTS.

VISUAL CHECK OF PRODUCT HOUSING

- The parts of the product cover/housing should be checked for eventual damages and breaking start at least every two months. In addition, especially the parts of the front lens holder have to be checked mechanically (by means of movement by the part) if it is firmly fastened to the fixture. If hint of a crack is found on some plastic part, do not use the product until the damaged part will be replaced.
- Cracks or another damages of the cover/housing parts can be caused by the product transportation or manipulation and also ageing process may influence materials.
- This checking is necessary for both fixed installations and preparing product for renting. Any free moving parts inside of the product, cracked cover/housing or any part of front lens not sitting properly in place need to be immediately replaced.

TROUBLESHOOTING

Problems	Possible causes	Checks and remedies
Product doesn't power ON.	No power to the product.	Check that power is switched ON and cables are plugged in.
	Fuse blown or internal fault.	- Check if the Fuse is intact and eventually replace it if necessary. - Contact the PROLIGHTS Service or authorized service partner. Do not remove parts and/or covers, or carry out any repairs or service that are not described in this Safety and User Manual unless you have both authorization from PROLIGHTS and the service documentation.
Product reset correctly but does not respond correctly to the controller.	Bad signal connection.	Inspect connections and cables. Fix eventual bad connections. Repair or replace damaged cables.
	Signal connection not terminated.	Insert DMX termination plug in signal output socket of the last product on the signal line.
	Incorrect addressing of the product.	Check the product address and control settings.
	One of the product is defective and is corrupting the signal transmission on the signal line.	Unplug the XLR in and out connectors and connect them directly together to bypass one product at a time until normal operation is regained. Once found the error, have that fixture serviced by a qualified technician.
Timeout error after fixture reset.	One or more hardware components requires mechanical adjustments.	Check product stored error messages for more information. Contact PROLIGHTS Service or an authorized service partner.
Mechanical effect loses position.	Mechanical hardware require cleaning, adjustment or lubrication.	Check product stored error messages for more information. Contact PROLIGHTS Service or an authorized service partner.
Light output turn OFF Intermittently.	Fixture is too hot.	- Check product stored error messages. - Allow product to cool. - Clean the product and airflow filters. - Reduce ambient temperature.
	Hardware failure (temperature sensor, fans, Light source...).	Check product stored error messages for more information. Contact PROLIGHTS Service or an authorized service partner.
General low light intensity.	Dirty lens assembly.	Clean the fixture regularly.
	Dirty or damaged filters.	Install lens assembly properly.

Contact an authorized service center in case of technical problems or not reported in the table can not be resolved by the procedure given in the table.

This image shows a single sheet of white paper with horizontal ruling lines. The lines are evenly spaced and run across the width of the page. There are no margins, text, or other markings on the paper.

This image shows a single sheet of white paper with horizontal ruling lines. The lines are evenly spaced and run across the width of the page. There are no margins, text, or other markings on the paper.

