

EclProfile CT+HPIP

IP65 450W 6 colors LED ellipsoidal, compatible with PRL and PRLZ lenses

ORDER CODE: **ECLCTPLUSHPIPBK**



The **EclProfile** CT+HP IP elevates the benchmark in LED ellipsoidals with an IP65 housing and delivering 450 Watts of fixture power, effectively doubling its lumen output to an impressive 14,000 lumens. Retaining the renowned 6-color LED engine of the CT+ series, it offers superior color rendering for unparalleled light quality. Specifically designed for longer throw distances and higher hanging positions, the CT+HP is the ideal replacement for traditional HPL 750W and 2kW tungsten fixtures, excelling in large venues such as theaters, studios, and auditoriums.

The latest generation of Spektra OS equips the **EclProfile** CT+HP with cutting-edge UI and control features. Seamlessly aligned with the PROLIGHTS ecosystem, it offers advanced color mixing, precision CCT reproduction, and user-friendly operation. The enhanced 2.4-inch display, complemented by four RGB backlit, pushable encoders, ensures a streamlined user experience. This innovation delivers intuitive control across multiple operating modes, ensuring consistency and efficiency for professionals.

Despite its increased output, the fixture maintains the compact dimensions of its predecessor, offering compatibility with industry-standard fixed-angle and zoomable lenses, including the PRL and PRLZ lenses. This ensures seamless integration with existing inventories, making it a versatile and cost-effective solution for diverse lighting needs.

MAIN FEATURES

- IP65 450W 6 colors LED ellipsoidal
- Spektra Os for High quality CCT reproduction and advanced color control
- New UI with 2.4" display and 4 backlit pushable encoder
- Compatible with with PRL and PRLZ lenses

TECHNICAL SPECIFICATION

LIGHT SOURCE

- Source: 450W 6 colour LEDs source
- Luminous flux: (10°) 11'384 lm; (14°) 9'863 lm; (19°) 10'977 lm; (26°) 13'536 m; (36°) 13'643 lm; (50°) 12'293 lm; (70°) 14'959 @4.000 K
- Lux: (10°) 16'659 lx; (14°) 8'676 lx; (19°) 5'157 lx; (26°) 3'517 lx; (36°) 1'902 lx; (50°) 989 lx; (70°) 660lx @5m 4.000 K
- CRI: 96
- R9: 98
- TLCi: 94,7
- Source life expectancy: > 50.000 h

OPTICS

- Lens type: high-quality glass lens optics
- Additional optics: optional 5° / 10° / 14° / 19° / 26° / 36° / 50° / 70° / 90° zoom 15°-30° / zoom 25°-50°
- Focus: manual
- Other: see available accessories

COLOUR SYSTEM

- Colour control: XY, CCT, Gel with Source Emulation, Tungsten emulation, HSI, User preset
- CCT: CCT control range from 1.800K to 20.000K, + / - green correction, tungsten emulation

DYNAMIC EFFECTS

- Special features: 4 fan modes available and output management and linear crossfade channel from any white to any colour; virtual CTO on colours

GOBOS

- Rotating gobos: optional, see available accessories
- Gobo size: (B size) 86 mm outer / 64.5 mm image / 1.1 mm thickness

CONTROL

- Supported Protocols: DMX512, RDM, CRMX
- DMX channels: from 1 channel to 30ch
- RDM: for remote addressing and parameter configuration
- Display: Graphic User Interface
- Stand Alone: 4 pushable RGB backlit encoder
- Master/Slave: for synchronised operation of more units linked in a chain

ELECTRONICS

- Dimmer: linear 0 - 100% electronic dimmer
- Dimmer curves: 4 selectable dimming modes available
- Strobe / shutter: 1 - 25 Hz, electronic
- Selectable PWM: 1282 to 20000 Hz (selectable steps)
- Firmware upgrade: via DMX with UPBOXPRO/UPBOX2 (not included) through dedicated software

CONNECTIONS

- Power connection: Seetronic powerCON TRUE IP65 IN/OUT
- Signal connection: Seetronic XLR 5p IN/OUT connectors
- Wireless Connection: integrated LumenRadio TimoTwo FX - CRMX, CRMX2 (RX only) and W-DMX compatible, Bluetooth enabled

ELECTRICAL

- Mains power supply: 100-240V - 50/60Hz
- Max power consumption (230V): 470W
- Output (at 230V): 5 units on a single power line
- Standby power: 11,3 W
- Power factor: > 0,94

PHYSICAL

- IP rating: IP65 for temporary outdoor use
- Cooling: heat pipe with low-noise fan
- Housing: Weatherproof IP65 construction with die-cast magnesium alloy
- Finish: black (RAL 9004)
- Operating temperature: Ta -20 to +45 °C (-4 to +113 °F)
- Dimensions (WxHxD): 292x267x628mm / 11.5"x10.51"x24.72"
- Weight: 12,5kg / 27.56lbs

INSTALLATION

- Suspension and fixing: bracket for hanging and positioning

CERTIFICATIONS / REPORTS

- Compliance: CE, RCM

BOX CONTENT


- 1 x ECLCTPLUSHPIPBK
- 1 x 1,5 meters 3G1,5mmq power cable (BARE END - SEETRONIC POWERCON TRUE1 IP65 power connector
- User Manual

ACCESSORIES & RELATED PRODUCTS


▪ ECLPRIPROTGOBO1BK	Rotating gobo assembly for ECL Profile fixtures, black housing	▪ ECLPRL05/10/14/19/26/36/50/70/90BK	5°/10°/14°/19°/26°/36°/50°/70°/90° PRL lens barrel for EclProfile fixtures, black housing
▪ FCLECLPRHP	Flightcase to contain 6 pcs ECLCTPLUSHP series with lenses 19°, 26°, 36°, 50°	▪ ECLPRSEF1	Soft edge filter and holder kit for ECL Profile fixtures
▪ FCLECLPRLZ	Flightcase to contain 8 ECLPRLZ zoom lenses	▪ ECLPRGH	Gobo holder for ECL Profile fixtures, B size
▪ ECLPRSMOOTHF3	Glass magnetic smooth/homogenizer filter for EclProfile	▪ ECLPRGHA	Gobo holder for ECL Profile fixtures, A size
▪ ECLPRHPPOYO	Pole operated yoke for ECL Profile HP series	▪ ECLPRIRIS	Iris accessory for ECL Profile fixtures
▪ ECLPRIPROTGOBO1BK	Rotating gobo assembly for ECL Profile fixtures, black housing	▪ LRT2WK1	Wireless kit 1 with TimoTwo
▪ ECLPRMOTOIRIS1BK	Motorised iris assembly for ECL Profile fixtures series, black	▪ IPTESTBOX	Portable vacuum and pressure tester for ProLights IP fixtures
▪ ECLPRHSNOOTBK	Half Snoot for ECL Profile series, comp. with 19°, 26° and 36° lenses, black	▪ AETHERBOX	IP65 1 universe CRMX transceiver, DMX and Ethernet protocols, Wi-Fi, Bluetooth and battery ready
▪ ECLPRFSNOOTBK	Full Snoot for ECL Profile series, comp. with 19°, 26° and 36° lenses, black	▪ AETHERBOXONE	IP65 1x universe CRMX transceiver, DMX, Ethernet protocols, Wi-Fi, Bluetooth, battery-ready, POE
▪ ECLPRLZ1530BK	Zoom 15°-30° PRL lens barrel for EclProfile fixtures, black housing	▪ SPGM10	28mm spigot for fixtures, M10 bolt
▪ ECLPRLZ2550BK	Zoom 25°-50° PRL lens barrel for EclProfile fixtures, black housing	▪ SPGM12	28mm spigot for fixtures, M12 bolt
▪ ECLLZ1530/2550	Optics for ECLFC/HDL profiler, gel frame holder included, zoom 15°-30°/25°-50°	▪ C6040B	Aluminum clamp for 28mm spigot, 200kg load, 48-51mm tubes, black
▪ ECLLZLLKA	Hexagonal head screw, to adapt ECLLZ lenses on ECLCTPLUS, ECLFW and ECLFS	▪ C6002B	Slim aluminum clamp, 200kg loading, 48-51mm tubes, M10 bolt, Black&White& White
▪ ECLLB05BK	5° lens barrel for Ecl Profile fixtures, filterframe included, black housing	▪ RSR0630B	Steel security cable for hanging bodies, inox steel shackle, L=60 cm, black
		▪ UPBOXPRO	Firmware uploader kit, USB IN, 5-pin XLR DMX OUT connector

PRESET FULL ON

Beam angle 50%: 26°

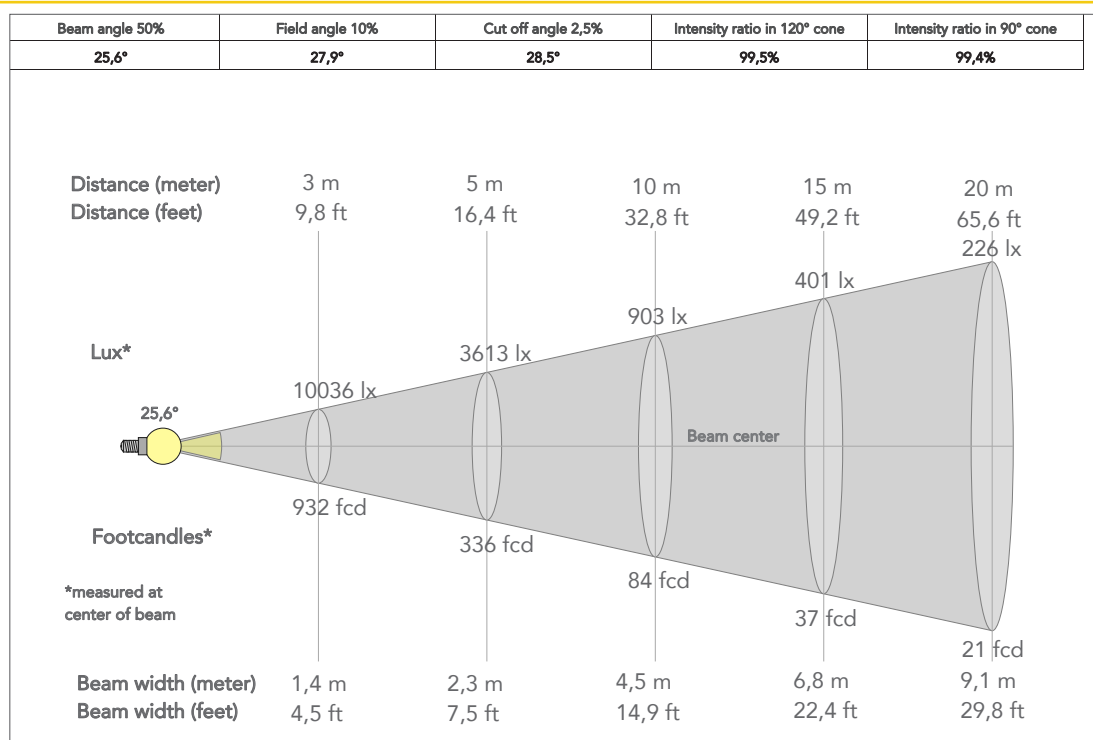

TECHICAL DRAWINGS

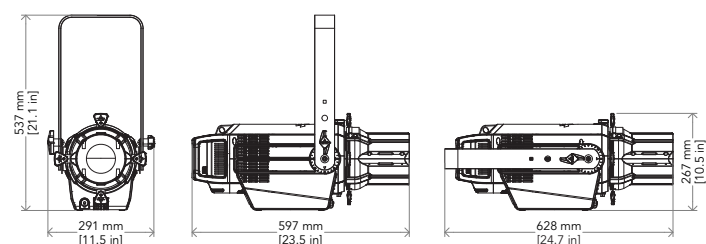

CERTIFICATIONS / APPROVALS



Visit our website
for specifications and
tech documentations