

EclPar DOTVW

20W Variable White LED pinspot, 5° beam angle

ORDER CODE: **ECLPARDOTVW**



EclPar DotVW is an ultra-compact, fan-free pinspot featuring a larger front lens and enhanced output. It delivers a bright, narrow projection with smooth white mixing and high quality white reproduction.

A 20W Variable White LED paired with a 60 mm lens produces a halo-free 5° beam, staying tight and bright even over long throws ideal for highlights, accents, scenic elements, set pieces, and discreet stage lighting.

EclPar DotVW combines a Variable White LED source with precise CCT control, delivering consistent behaviour and high-fidelity whites with excellent colour rendering.

The fixture is passively cooled and completely silent. With a weight of only 1.2 kg and an ultra-compact form factor, it can be placed virtually anywhere. On-board DMX (XLR) in/out and power in/out connections make installation fast and enable easy daisy-chaining. The integrated push encoder also allows intuitive standalone operation without a control signal, ensuring quick setup and ease of use.

MAIN FEATURES

- 20 W Variable White LED, 2,800 K - 6,500 K with high CRI
- Tight 5° beam with 60 mm lens, halo-free projection
- Advanced CCT control and high-fidelity white reproduction
- Fan-free, 1.2 kg, with chassis-mounted DMX in/out and power in/out for easy daisy-chain wiring

TECHNICAL SPECIFICATION

LIGHT SOURCE

- Source: 1 x 20W Warm White + Cold White LEDs
- Source CCT: K dedicated variable CCT channel (2800-6500 K)
- Luminous flux: 844 lm @Full
- Luminous flux: 753 lm @3.200 K; 889 lm @5.600 K
- Lux: 3.702lx @5 m full
- Lux: 3.349lx @5 m 3.200K; 3.811lx @5 m 5.600K
- CRI: 96,7 @3.200K; 96,1 @5.600K
- R9: 91,7 @3.200K; 98,6 @5.600K
- TLCI: 95 @3.200K; 99 @5.600K
- TM30 Rf: 93,6 @3.200K; 94,1 @5.600K
- TM30 Rg: 104,4 @3.200K; 102,9 @5.600K
- Source life expectancy: > 90.000 hrs (L70B10 @Ta 25° C / 77° F)

OPTICS

- Beam angle: 4,6°
- Field angle: 7,7°
- Lens diameter: 60mm / 2.36"

COLOUR SYSTEM

- Colour mixing: tunable white
- CCT: CCT control through dedicated DMX channel
- Macros: built-in white presets

DYNAMIC EFFECTS

- Static mode: selection of static dimmer, colors and color temperature
- Manual mode: manual adjustment of dimmer and strobe
- Auto mode: built-in programs with execution speed adjustment

CONTROL

- Supported Protocols: DMX512, RDM
- DMX channels: 1 / 2 / 3 / 4 / 9ch
- RDM: for remote addressing and parameter configuration
- Display: LED display user interface
- Stand Alone: push encoder
- Master/Slave: for synchronised operation of more units linked in a chain

ELECTRONICS

- Dimmer: linear 0 - 100% electronic dimmer
- Dimmer curves: 4 selectable dimming modes available
- Strobe / shutter: 1-30 Hz, electronic
- Selectable PWM: 600 to 25000 Hz (selectable steps)
- Firmware upgrade: via DMX with UPBOXPRO/UPBOX1 (not included)

CONNECTIONS

- Power connection: Seetronic powerCON IN/OUT connectors
- Signal connection: Amphenol XLR 5p IN/OUT connectors

ELECTRICAL

- Mains power supply: 100-240V - 50/60Hz
- Max power consumption (230V): 25W
- Standby power: 1 W
- Power factor: > 0,9

PHYSICAL

- IP rating: IP20
- Cooling: fan-free with natural convection
- Housing: Sturdy die-cast aluminium body
- Finish: black
- Operating temperature: Ta -10 to +45 °C (+14 to +113 °F)
- Dimensions (WxHxD): 165x221x144mm / 6.5"x8.7"x5.67"
- Weight: 1,2kg / 2.65lbs

INSTALLATION

- Suspension and fixing: double hanging bracket suitable for safe hanging and for floor positioning
- Other: Front mount holder for accessories - see available accessories

CERTIFICATIONS / REPORTS

- Compliance: CE, RCM, cTUVus

BOX CONTENT


- 1 x ECLPARDOTVW
- 1 x 1,5 meters 3G1,5mmq power cable (BARE END - SEETRONIC POWERCON TRUE1 IP65 power connector)
- User Manual

ACCESSORIES & RELATED PRODUCTS


▪ PPBAG02	Waterproof and rugged Polypropylene case, 414x345x174 mm	▪ TOUR53415L03BK	Dmx cable HC5340. CANS5MXX XLR 5p->CANS5FXX XLR (f) 5p
▪ PDOTFSNOOT	Full Snoot Accessory for EclParDOT	▪ 958215L03	3x1.5mm TH07 Cable, 16A 3p PwCon MXW, 16A 3p PwCon FXW
▪ PDOTCLOUVRE	Concentric Louvre Accessory for EclParDOT	▪ 9513FXWL03	Ass. 3x2.5mm TH07 cable, 16A 3p 230V CEE plug, MENAC3FXW socket
▪ SPGM10	28mm spigot for fixtures, M10 bolt	▪ 9533FXWL03	Ass. 3x2.5mm TH07 cable, SCHUKO plug, MENAC3FXW socket
▪ SPGM12	28mm spigot for fixtures, M12 bolt		
▪ RSR0630B	Steel security cable for hanging bodies, inox steel shackle		
▪ C6002B	Slim aluminium clamp, 200 kg loading, 48-51 mm tubes, M10 bolt		
▪ UPBOXPRO	Firmware uploader kit, USB IN, 5-pin XLR DMX OUT connector		

PRESET FULL ON

Beam angle 50%: 4,6°

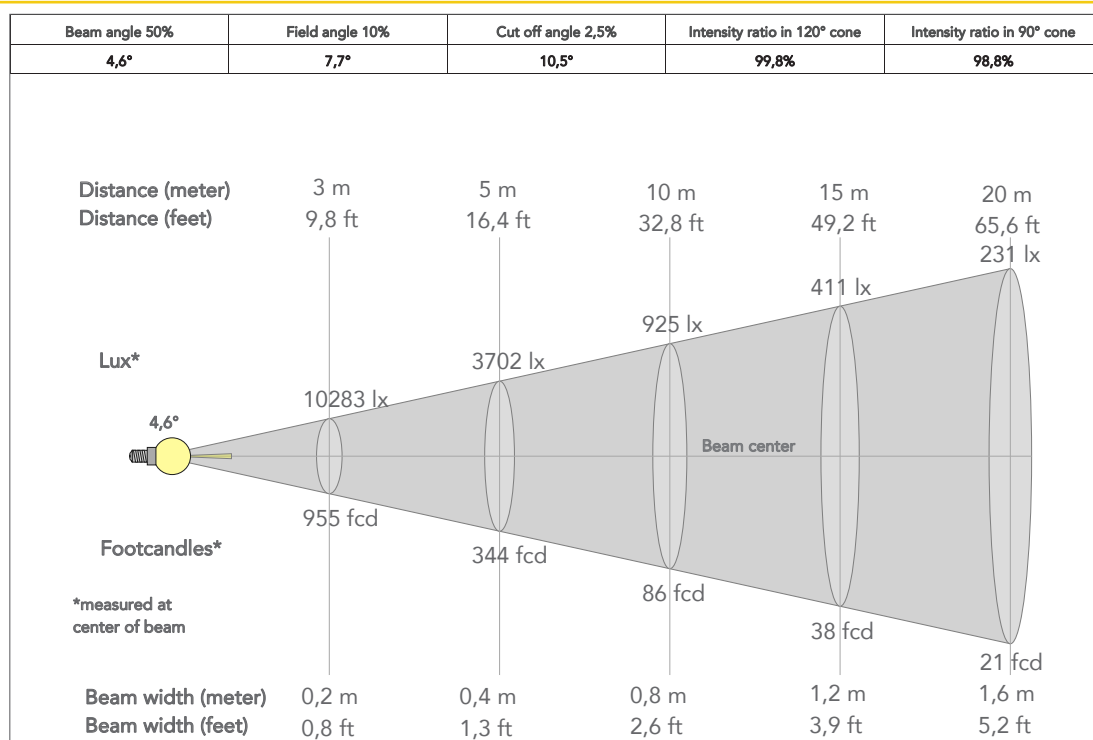

TECHICAL DRAWINGS

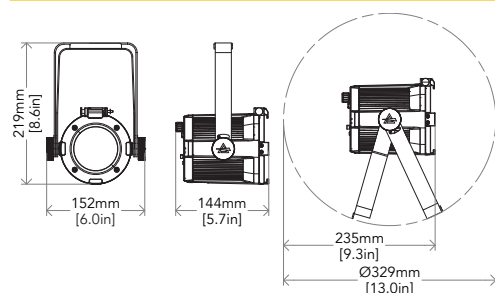

PROLIGHTS is a trademark of
MUSIC & LIGHTS S.r.l.
musiclights.it

Via A. Olivetti snc
04026 - Minturno (LT) ITALY
Tel: +39 0771 72190

CERTIFICATIONS / APPROVALS



Conforms to UL STD. 1573
Certified to CSA STD: C22.2 NO. 166

Visit our website
for specifications and
tech documentations



prolights.it
info@prolights.it