

EclPar IPSVW

IP65 single source 60W VariableWhite LED spotlight, 15° optics included

ORDER CODE: **ECLPARIPSVWBK**



The **EclPar IPSVW** is an ultra compact and fan free IP-rated single source LED spotlight, tailored for accent lighting and nearfield projection which seamlessly integrates anywhere.

This fixture is powered by a 60W Variable White LED source, capable of producing up to 3,500 fixture lumens with high efficiency and advanced control.

EclPar IPSVW excels in delivering superior white light reproduction, boasting high CRI and TM30 values.

Its compact and fan-free design renders the **EclPar IPSVW** an indispensable tool for both indoor and outdoor venues, blending seamlessly into various environments. The fixture's versatility is further enhanced by its flexible optical system, accommodating a broad range of lenses. These include a narrow 15° lens (onboard), medium 30°, and a wide 60° flood option. Additionally, it supports asymmetric filters and optical modifiers, all swiftly attachable via dedicated accessory holders, allowing for swift adaptation to diverse lighting requirements.

MAIN FEATURES

- 60W Variable White LED delivering high CRI, TLCI, TM30 values
- Flex lens system: 15° on-board - 30° , 60° and asymmetric optional
- IP65 & fan-free for exterior application

TECHNICAL SPECIFICATION

LIGHT SOURCE

- Source: 60W Variable White LED
- Luminous flux: (15°) 3'438, (30°) 3'117, (60°) 3'258 @Full
- Lux: (15°) 1'840, (30°) 458, (60°) 169lx @5 m full
- CRI: 96,9 @full; 96,2 @3'200K; 98 @5'600K
- R9: 91,2 @3'200K; 96,4 @5'600K
- TLCI: 99 @full; 98 @3'200K; 99 @5'600K
- TM30 Rf: 94,2 @full; 95,2 @3'200K; 93,4 @5'600K
- TM30 Rg: 102,3 @full; 103,1 @3'200K; 100,5 @5'600K
- Source life expectancy: > 50.000 h

OPTICS

- Beam angle: (on-board) 15° - (opt) 30°, 60°
- Field angle: (on-board) 23°
- Lens diameter: 100mm / 3.94"
- Lens type: parabolic reflector in combination with HD fresnel lens
- Additional optics: (opt) 30°, 60°
- Other: possible to mount lens both on the internal side and on the external side

COLOUR SYSTEM

- Colour mixing: tunable white
- CCT: CCT control through dedicated DMX channel
- White presets: 2.700 K ~ 6.500K
- Macros: built-in white presets

DYNAMIC EFFECTS

- Static mode: selection of static dimmer and color temperature
- Manual mode: manual adjustment of dimmer and strobe
- Auto mode: built-in programs with execution speed adjustment

CONTROL

- Supported Protocols: DMX512, RDM, CRMX (optional)
- DMX channels: 1 / 2 / 4 / 5 / 9 / 11ch
- RDM: for remote addressing and parameter configuration
- Display: Graphic User Interface
- Master/Slave: for synchronised operation of more units linked in a chain

ELECTRONICS

- Dimmer: linear 0 - 100% electronic dimmer
- Dimmer curves: 4 selectable dimming modes available
- Strobe / shutter: 1 - 30 Hz, electronic
- Selectable PWM: 600 to 40000 Hz (selectable steps)
- Firmware upgrade: via DMX with UPBOXPRO/UPBOX1 (not included)

CONNECTIONS

- Power connection: Seetronic powerCON TRUE IP65 IN/OUT
- Signal connection: Seetronic XLR 5p IN/OUT connectors
- Wireless Connection: optional LumenRadio TiMo FX RDM - CRMX and W-DMX compatible

ELECTRICAL

- Mains power supply: 100-240V - 50/60Hz
- Max power consumption (230V): 65W
- Standby power: 1,7 W
- Power factor: > 0,93

PHYSICAL

- IP rating: IP65 for temporary outdoor use
- Cooling: fan-free with natural convection
- Housing: Sturdy die-cast aluminium body
- Finish: black
- Operating temperature: Ta -20 to +45 °C (-4 to +113 °F)
- Dimensions (WxHxD): 211x284x248mm / 8.31"x11.18"x9.76"
- Weight: 2,8kg / 6.17lbs

INSTALLATION

- Suspension and fixing: double hanging bracket suitable for safe hanging and for floor positioning
- Other: Front mount holder for accessories as barn door, filter frame

CERTIFICATIONS / REPORTS

- Compliance: CE, RCM, FCC, cTUVus
- (*) NOTE: Suitable for permanent outdoor use, provided installation and maintenance cycles by qualified technicians are carried.

BOX CONTENT


- 1 x ECLPARIPSVW
- 1 x EPIPSLENS15
- 1 x 1,5 meters 3G1,5mmq power cable (BARE END - SEETRONIC POWERCON TRUE1 IP65 power connector)
- User Manual

ACCESSORIES & RELATED PRODUCTS


▪ FCLECLPARIPS	Flight case for 6 pcs of ECLPARIPS series	▪ RSR0630B	Steel security cable for hanging bodies, inox steel shackle, L=60 cm, black
▪ EPIPSLENS15/30/60	ECLPARIPS series lens 15°, 30°, 60°	▪ C6002B	Slim aluminum clamp, 200kg loading, 48-51mm tubes, M10 bolt, Black
▪ EPIPSFHBK	Filter holder for ECLPARIPS series	▪ TOUR53415L03	Dmx cable HC5340. CANS5MXX XLR 5p->CANS5FXX XLR (f) 5p, L.3m
▪ EPIPSFILT1020/1040/1060/3060	Light diffusion filter for ECLPARIPS series, asymmetric 10°x20° 10°x40°, 10°x60°, 30°x60°	▪ 9533FXWL03	Ass. 3x2.5mm TH07 cable, SCHUKO plug, MENAC3FXW socket, L.3m
▪ ECLPARIPSBDBK	Barn door with 8 directional flaps to adjust the light beam for ECLPARIPS	▪ 9513FXWL03	Ass. 3x2.5mm TH07 cable, 16A 3p 230V CEE plug, MENAC3FXW socket, L.3 m
▪ EPIPSFSNOOTBK	Full snoot for ECLPARIPS series	▪ 958215L03	3x1.5mm TH07 Cable, 16A 3p PwCon MXW, 16A 3p PwCon FXW, L. 3m
▪ EPIPSHLOUVREBK	Honeycomb louvre for ECLPARIPS series	▪ UPBOXPRO	Firmware uploader kit, USB IN, 5-pin XLR DMX OUT connector
▪ EPIPSCLOUVREBK	Concentric louvre for ECLPARIPS series		
▪ ECLPARIPMWKBK	CRMX Timo Fx kit for ECLPARIP serie		
▪ SPGM12	28mm spigot for fixtures, M12 bolt		
▪ SPGM10	28mm spigot for fixtures, M10 bolt		

PRESET FULL ON

Beam angle 50%: 15°

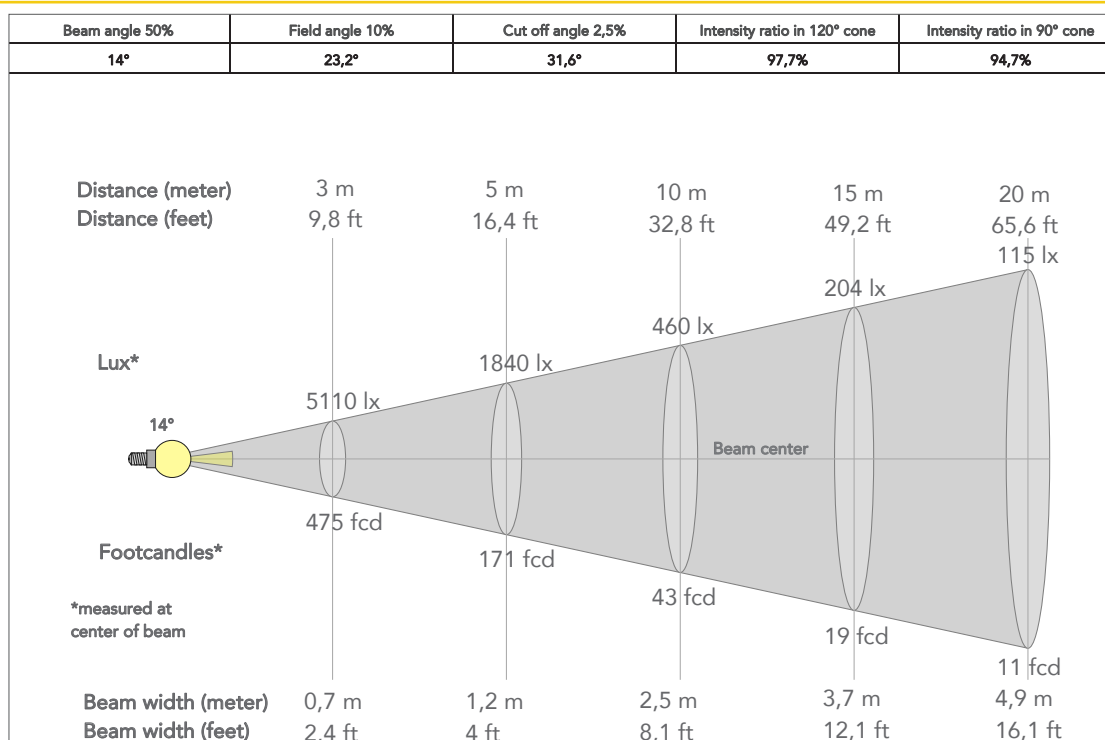

TECHICAL DRAWINGS

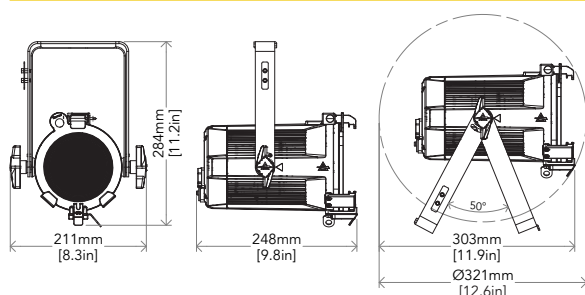

CERTIFICATIONS / APPROVALS



Conforms to UL STD. 1573
Certified to CSA STD: C22.2 NO. 166

Visit our website
for specifications and
tech documentations

