

EclPendant FC

200W RGB+WarmWhite innovative pendant light



The **EclPendant** is a beautifully designed house light packed with high-performing technology that makes any venue well-lit whilst staying eco-friendly. This innovative series of pendant lights come with a wide selection of LED sources, a full range of optics, accessories, mounting options and control. The **EclPendant** has a 200-Watt LED source. Its source varies in RGB + Warm White, 3,000K, 4,000K or 5,600K. They all have high-quality light output, a consistent colour temperature and unmatched durability. Several advanced user settings are available from the unit's on-board GUI and control protocols like DALI, DMX + RDM and Wireless DMX (CRMX + W-DMX). The **EclPendant** was made for several uses - its mounting options include pendant, surface, stem, wall mount, adjustable bracket, and recessed. It's also possible to wire the EclPendant series directly to mains (100-240AC or 48DC) and DMX or DALI through terminal blocks or feed power and DMX using the TrueOne and DMX connections. The fixture has a wide range of optics and accessories available, with an uncompromising approach to flexibility and precision. All the optics are easily changeable on-site, providing a hassle-free user experience. The **EclPendant** has a fan-free thermal design and delivers a powerful and consistent lumen output over a long lifespan.

NOTE: the hanging bracket does not come with the product

VERSIONS

Code	Housing
ECLPENDANTFCBK	Black
ECLPENDANTFCWH	White

TECHNICAL SPECIFICATION

LIGHT SOURCE

- Source: 200W RGBWW LEDs
- CCT: WW LED: 3.200K
- Luminous flux: 10'168 @Full
- Lux: 1.757lx @5 m full
- CRI: 94,1 @3200K; 94,6 @5600K
- R9: 91,4 @3200K; 96,6 @5600K
- TLCI: 89 @3200K; 94 @5600K
- TM30 Rf: 92,9 @3200K; 91,3 @5600K
- TM30 Rg: 106,2 @3200K; 103,8 @5600K
- Source life expectancy: > 50.000 hrs (L70B10 @Ta 25° C / 77° F)

OPTICS

- Beam angle: 20°
- Field angle: 40°
- Lens diameter: 157mm / 6.18"
- Lens type: fresnel lens
- Other: see available accessories

COLOUR SYSTEM

- Colour mixing: RGB + Warm White
- CCT: CCT control, + / - green correction, tungsten emulation
- Colour wheel: gel filters included
- Macros: several pre-built macros with adjustable speed

DYNAMIC EFFECTS

- Static mode: selection of static dimmer, colors and color temperature
- Manual mode: manual adjustment of colour
- Auto mode: built-in programs with execution speed adjustment

BODY

- Body: sturdy die-cast aluminium body
- Body colour: see available finishing

CONTROL

- Protocols: DALI Type8, DMX512, RDM, CRMX
- DMX channels: UNO / DUO / Basic / Standard / Extendedchannel
- Wireless Control: included, LumenRadio Timo Fx DMX/RDM compatible with both CRMX (Lumen Radio) and W-DMX (Wireless DMX)

MAIN FEATURES

- 200W LED source power, RGB + Warm White, 3,000K, 4,000K or 5,600K with passive cooling
- AC or DC power input. Control via DALI, DMX, RDM, Wireless DMX (CRMX+W-DMX)
- Extensive mounting option possibilities, optics and accessories are all easily changeable

- RDM: RDM for remote monitoring and settings
- Display: Graphic User Interface
- Firmware upgrade: via DMX with UPBOXPRO/UPBOX1 (USB-DMX interface not included)
- Other: 16bit control of dimmer and colour

ELECTRONICS

- Dimmer: linear 0 ~ 100% electronic dimmer
- Dimmer curves: 4 selectable dimming modes available
- Strobe / shutter: 1-30 Hz, electronic
- Operating temperature: -10° ~ +45° Ta
- LED Control: flicker free frequency with adjustable PWM
- Selectable PWM: 600 ~ 40.000 Hz

ELECTRICAL

- Mains power supply: 100-240V - 50/60Hz
- Low Voltage DC mains: DC 48V for emergency light use
- Max power consumption: 220W
- Output (at 230V): 10 units on a single power line
- Power factor: > 0,97

PHYSICAL

- IP rating: IP20
- Cooling: Heatsink with heat pipes, natural convection cooling enabled by a fanless design and a chassis engineered for passive heat dissipation
- Suspension and fixing: bracket for hanging and positioning (bracket not included on the product)
- Signal connection: screw terminal block, Amphenol XLR 5p IN/OUT connectors
- Power connection: screw terminal block, Neutrik powerCON TRUE1 IN/OUT connectors
- Low Voltage DC connector: DC 48V through screw terminal block
- Dimensions (WxHxD): 202x392x202mm / 7.95"x15.43"x7.95"
- Weight: 7,5kg / 16.53lbs

CERTIFICATIONS / APPROVALS

- Certifications / Approvals: CE, UKCA, RCM, cTUVus, FCC


ACCESSORIES & RELATED PRODUCTS

- ECLPENDLENS20/40/60 ECLPENDANT series lens 20°/40°/60°
- ECLPENDHGBRKBK/WH Hanging bracket for ECLPENDANT series, black/white housing
- ECLPENDRECKITBK/WH Ceiling recessed kit for ECLPENDANT series, black/white housing
- ECLPENDHSNOOTBK/WH Half snoot for ECLPENDANT series, black/white housing
- ECLPENDFSNOOTBK/WH Full snoot for ECLPENDANT series, black/white housing
- ECLPENDHLOUVREBK/WH Honeycomb louvre for ECLPENDANT series, black/white housing
- ECLPENDCLOUVREBK/WH Concentric louvre for ECLPENDANT series, black/white housing
- ECLPENDBDBKWH Barn door with 8 directional flaps to adjust the light beam for ECLPENDANT, black/white
- ECLPENDWALLBRKBK/WH Wall mounting bracket for ECLPENDANT and ECLPENDANTJR series, black/white housing
- ECLPENDCEILKITBK/WH Ceiling adapter kit for ECLPENDANT series, black/white housing


- ECLPENDWALLBRKBK/WH Ring adapter for ECLPENDWALLBRK (not included), black/white
- TOUR53415L03 Dmx cable HC5340. CANS5MXX XLR 5p->CANS5FXX XLR (f) 5p, L.3m
- C6002B Slim aluminum clamp, 200kg loading, 48-51mm tubes, M10 bolt, Black
- RSR0630B Steel security cable for hanging bodies, inox steel shackle, L=60 cm, black
- 9533FXWL03 Ass. 3x2.5mm TH07 cable, SHUKO plug, MENAC3FXW socket, L.3m
- 9513FXWL03 Ass. 3x2.5mm TH07 cable, 16A 3p 230V CEE plug, MENAC3FXW socket, L.3 m
- 958225L03 3x2.5mm TH07 Cable, 16A 3p PwCon MXW, 16A 3p PwCon FXW, L. 3m
- UPBOXPRO Firmware uploader kit, USB IN, 5-pin XLR DMX OUT connector

PRESET FULL ON

Beam angle 50%: 24°

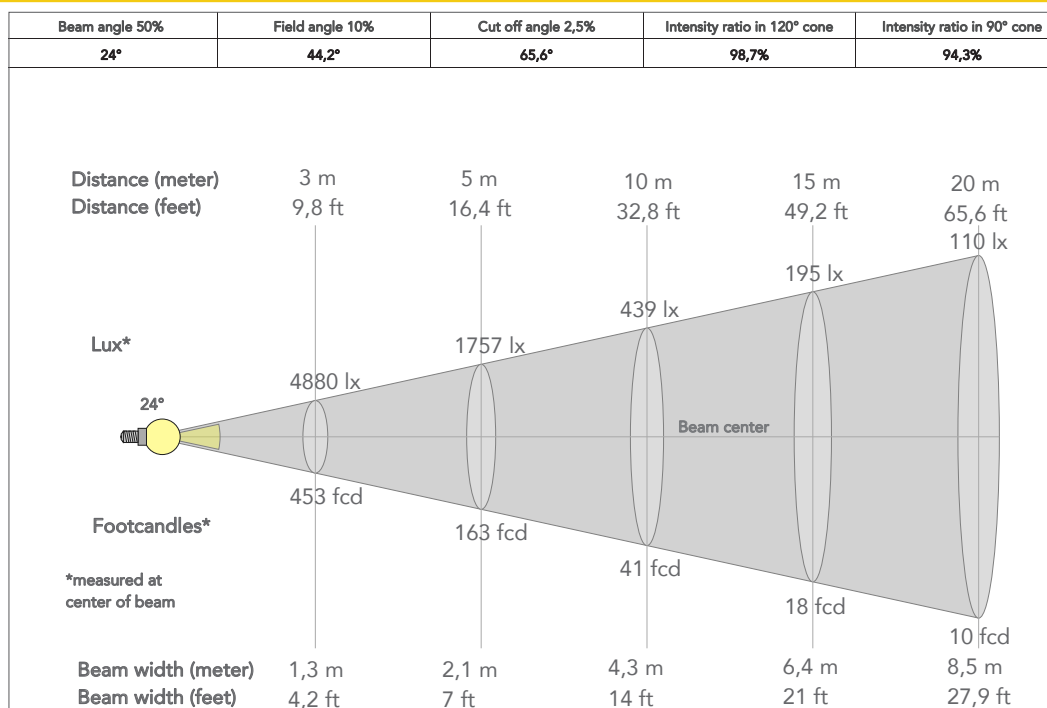

TECHNICAL DRAWINGS

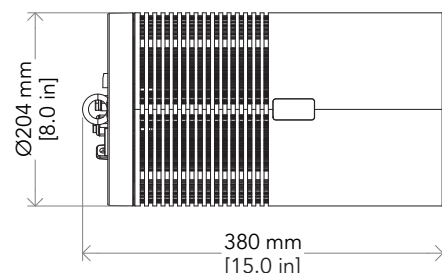

CERTIFICATIONS / APPROVALS



Conforms to UL STD. 1573
Certified to CSA STD: C22.2 NO. 166

Visit our website
for specifications and
tech documentations

