

EclPendant SVW

50W Variable White House light with passive cooling



The **EclPendant S** merges elegant design with cutting-edge, eco-friendly technology, ensuring optimal illumination for any venue. This series of pendant lights offers a diverse range of LED sources, including options in RGB + Warm White, Variable White and single color (3000K, 4000K and 5600K), each featuring a 50-Watt LED that provides high-quality light output, uniform color, and remarkable durability.

Completed by a wide range of optics, accessories, and versatile mounting solutions, the **EclPendant S** adapts to various installation needs. Mounting alternatives include pendant, surface, stem, wall, adjustable bracket, and recessed options. It can be directly wired to mains power (100-240 VAC or 48 VDC) and integrates seamlessly with control protocols like DMX + RDM and DALI, thanks to its accessible terminal blocks.

User-friendly settings are manageable via the unit's onboard GUI, enhancing its functionality. The fixture's wide array of optics and accessories is designed for utmost flexibility and precision, allowing easy on-site changes without complications.

Notably, the **EclPendant S** features a fan-free thermal design, ensuring quiet operation while delivering consistent and robust lumen output throughout its extended lifespan.

*** Please note:** The hanging bracket is not included with the product.

VERSIONS

Code	Housing
ECLPENDANTSVWBK	Black
ECLPENDANTSVWWH	White

TECHNICAL SPECIFICATION

LIGHT SOURCE

- Source: 50W Variable White LED
- CCT: 2'700K - 6'500K
- Luminous flux: (2'700K) 2'751 lm; (6'500K) 3'580 lm; (FULL) 3'230
- Lux: (2'700K) 651 lx; (6'500K) 850 lx; (FULL) 768lx @ 5 m
- CRI: 96,8 @2'700K; 96,1 @6'500K; 95,8 @ full
- R9: 97,9 @2'700K; 95,2 @6'500K; 82,7 @ full
- TLCI: 98 @2'700K; 96 @6'500K; 98 @ full
- TM30 Rf: 95,2 @2'700K; 90,3 @6'500K; 92,3 @ full
- TM30 Rg: 102,3 @2'700K; 99,3 @6'500K; 102,1 @ full
- Source life expectancy: > 50.000 hrs (L70B10 @Ta 25° C / 77° F)

OPTICS

- Beam angle: 20°
- Field angle: 40°
- Lens diameter: 100mm / 3.94"
- Lens type: fresnel lens
- Other: see available accessories

COLOUR SYSTEM

- Colour mixing: tunable white
- CCT: linear CCT control
- Colour wheel: built-in white presets
- Macros: several pre-built macros with adjustable speed

DYNAMIC EFFECTS

- Static mode: selection of static dimmer and color temperature
- Manual mode: manual adjustment of dimmer and strobe
- Auto mode: built-in programs with execution speed adjustment

BODY

- Body: sturdy die-cast aluminium body
- Body colour: RAL 9004 or RAL 9010

CONTROL

- Protocols: DALI Type8, DMX512, RDM, CRMX (optional)
- DMX channels: 1 / 2 / 5 / 9 / 13channel
- Wireless Control: optional, LumenRadio Timo Fx DMX/RDM compatible with both CRMX (Lumen Radio) and W-DMX (Wireless DMX) (Order code SP018409)

MAIN FEATURES

- House light with 50W Variable White LED source with passive cooling
- 100-240 VAC or 48 VDC power input. Control via DALI, DMX, RDM
- Extensive mounting option, optics and accessories available

- RDM: RDM for remote monitoring and settings
- Display: Graphic User Interface
- Firmware upgrade: via DMX with UPBOXPRO/UPBOX1 (USB-DMX interface not included)
- Other: 16bit control of dimmer and colour

ELECTRONICS

- Dimmer: linear 0 ~ 100% electronic dimmer
- Dimmer curves: 4 selectable dimming modes available
- Strobe / shutter: 1-30 Hz, electronic
- Operating temperature: -10° ~ +45° Ta
- LED Control: flicker free frequency with adjustable PWM
- Selectable PWM: 600 ~ 40.000 Hz

ELECTRICAL

- Mains power supply: 100-240V - 50/60Hz
- Low Voltage DC mains: DC 48V for emergency light use
- Max power consumption: 60W
- Output (at 230V): 24 units on a single power line
- Power factor: > 0,93

PHYSICAL

- IP rating: IP20
- Cooling: Heatsink with heat pipes, natural convection cooling enabled by a fanless design and a chassis engineered for passive heat dissipation
- Suspension and fixing: bracket for hanging and positioning (bracket not included on the product)
- Signal connection: Screw terminal block
- Power connection: Screw terminal block
- Dimensions (WxHxD): 135x300x135mm / 5.31"x11.81"x5.31"
- Weight: 3kg / 6.61lbs

CERTIFICATIONS / APPROVALS


- Certifications / Approvals: CE, RCM, FCC, cTUVus

ACCESSORIES & RELATED PRODUCTS


▪ ECLPENDSLENS20/40/60	ECLPENDANTS series lens 20°/40°/60°	▪ ECLPENDWALLBRKABK/WH	Ring adapter for ECLPENDWALLBRK (not included)
▪ ECLPENDSHGBRKBK/WH	Hanging bracket for ECLPENDANTS series, black/white housing	▪ ECLPENDSCEILKITBK/WH	Ceiling adapter kit for ECLPENDANTS series, black/white housing
▪ ECLPENDSRECKITBK/WH	Ceiling recessed kit for ECLPENDANTS series, black/white housing	▪ TOUR53415L03	Dmx cable HC5340. CANCEMXX XLR 5p->CANCEFXX XLR (f) 5p, L.3m
▪ ECLPENDSHSNOOTBK/WH	Half snoot for ECLPENDANTS series, black/white housing	▪ C6002B	Slim aluminum clamp, 200kg loading, 48-51mm tubes, M10 bolt, Black
▪ ECLPENDSFSNOOTBK/WH	Full snoot for ECLPENDANTS series, black/white housing	▪ RSR0630B	Steel security cable for hanging bodies, inox steel shackle, L=60 cm, black
▪ ECLPENDSHLOUVREBK/WH	Honeycomb louvre for ECLPENDANTS series, black/white housing	▪ 9533FXWL03	Ass. 3x2.5mm TH07 cable, SHUKO plug, MENAC3FXW socket, L.3m
▪ ECLPENDSCLOUVREBK/WH	Concentric louvre for ECLPENDANTS series, black/white housing	▪ 9513FXWL03	Ass. 3x2.5mm TH07 cable, 16A 3p 230V CEE plug, MENAC3FXW socket, L.3 m
▪ ECLPENDSBDBKWH	Barndoor with 4 directional flaps to adjust the light beam for ECLPENDANTS, black/white	▪ 958225L03	3x2.5mm TH07 Cable, 16A 3p PwCon MXW, 16A 3p PwCon FXW, L. 3m
▪ ECLPENDWALLBRKBK/WH	Wall mounting bracket for ECLPENDANT series, black/white housing	▪ UPBOXPRO	Firmware uploader kit, USB IN, 5-pin XLR DMX OUT connector

PRESET 2700K FULL ON

Beam angle 50%: 20°

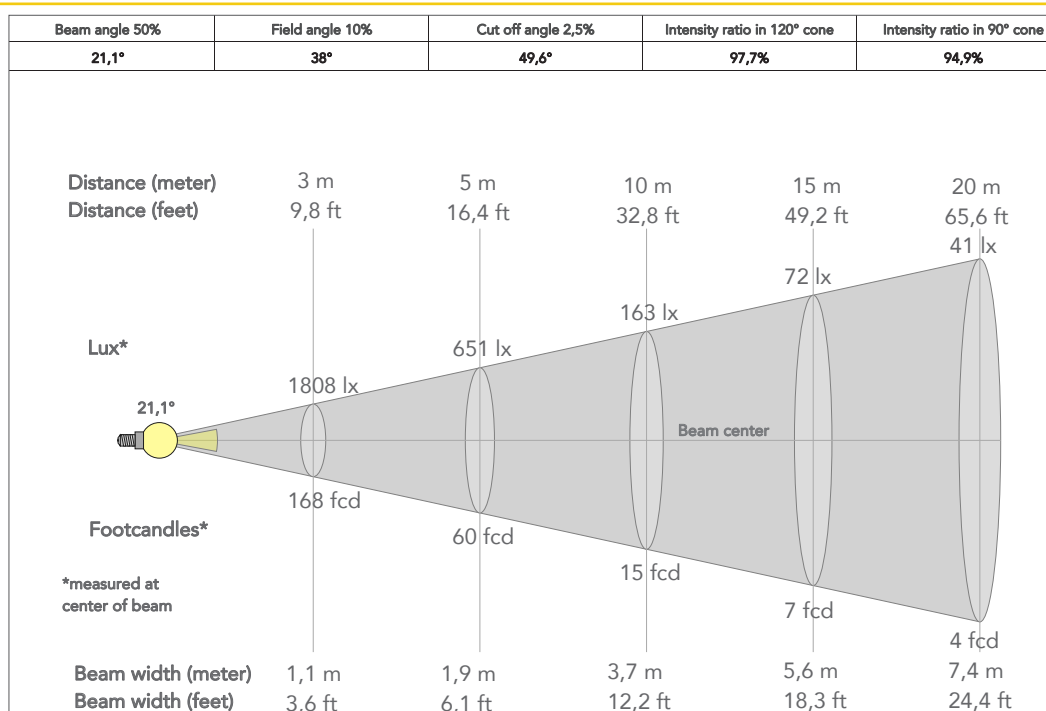

TECHNICAL DRAWINGS

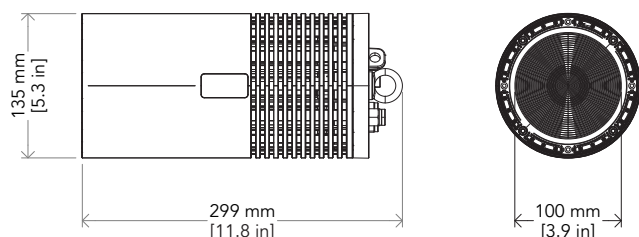

CERTIFICATIONS / APPROVALS



Conforms to UL STD. 1573
Certified to CSA STD: C22.2 NO. 166

Visit our website
for specifications and
tech documentations

