

Gallery WashDATVW

Compact LED wall wash with 60W LED VariableWhite



VERSIONS

Code	Housing
GALLERYWASHDATVWB	Black
GALLERYWASHDATVWW	White

TECHNICAL SPECIFICATION

LIGHT SOURCE

- Source: 60W Variable White LED
- Luminous flux: 3'334lm @3.200 K; 3'809lm @5.600 K; 3'689lm @Full
- Lux: 44lx @3.200 K; 49lx @5.600 K; 48lx @5 m full
- CRI: 94,2 @3.200 K; 95,4 @5.600 K;
- R9: 83 @3.200 K; 82 @5.600 K;
- TLCI: 98 @3.200 K; 97 @ 5.600 K;
- TM30 Rf: 94,4 @3.200 K; 91,9 @5.600 K;
- TM30 Rg: 104,7 @3.200 K; 102,9 @5.600 K;
- Source life expectancy: > 50.000 hrs (L70B10 @Ta 25° C / 77° F)

OPTICS

- Beam angle: (VxH) 67°x117°
- Additional optics: Smooth filter on-board - see available accessories

COLOUR SYSTEM

- Colour mixing: tunable white
- CCT: CCT control through dedicated DMX channel
- White presets: 2'700K - 5'600K
- Colour wheel: built-in white presets

DYNAMIC EFFECTS

- Control Resolution: 16-bit dimmer and color control
- Static mode: selection of static dimmer and color temperature

CONTROL

- Supported Protocols: DMX512, RDM, CRMX + WDMX (optional)
- DMX channels: 1 / 2 / 4 / 10ch
- RDM: for remote addressing and parameter configuration
- Display: user interface through DATAMASTER external coder (not included)

ELECTRONICS

- Dimmer: linear 0 - 100% electronic dimmer
- Dimmer curves: 4 selectable dimming modes available
- Strobe / shutter: 1 - 30 Hz, electronic
- Selectable PWM: 600 to 25000 Hz (selectable steps)
- Firmware upgrade: via DMX with UPBOXPRO/UPBOX1 (not included)

Gallery WashDAT is a compact and efficient LED wallwash luminaire, purpose-designed for precise, uniform illumination of walls, exhibits, and shelving in galleries, events, and venues. Its advanced optical system combines a custom linear LED source with an asymmetrical reflector, significantly reducing the required number of fixtures by enabling greater spacing without compromising visual comfort or uniformity.

The **Gallery WashDAT VW** variant includes a 60W variable white LED source, providing adjustable color temperatures ranging smoothly from warm 2'700K to cool 5'600K. This model excels in applications requiring precise white-light control to enhance visual clarity and ambiance. Control flexibility is assured through integrated RDM, DMX, and intuitive local dimming.

Optional wireless control modules (LumenRadio CRMX) can be specified to simplify installation and enhance operational convenience. With its stylish cubic form factor, **Gallery WashDAT** integrates seamlessly into both contemporary interiors and historic venues. The integrated power supply and driver facilitate straightforward installation, further supported by an extensive range of accessories, including track adapters, adjustable yokes, ceiling mounting kits, and optical modifiers such as barn doors, holographic filters, and snoots.

MAIN FEATURES

- 60W Variable White linear LED engine offers dynamic color mixing and precision tunable white lighting
- Custom asymmetrical reflector ensures superbly uniform wall illumination, minimizing fixture count and installation complexity
- Supports RDM, DMX, local knob dimming, and optional wireless protocols (CRMX) for flexible and intuitive operation
- Integrated power supply with extensive mounting accessories and optical modifiers enables quick installation and precise customization for any venue

CONNECTIONS

- Power connection: screw terminal blocks
- Wireless Connection: optional LumenRadio TiMo RX RDM - CRMX and W-DMX compatible
- Data connection: screw terminal blocks

ELECTRICAL

- Mains power supply: 100-240V - 50/60Hz
- Max power consumption (230V): 53W
- Standby power: 1,3W
- Power factor: > 0,95

PHYSICAL

- IP rating: IP20
- Cooling: fan-free with natural convection
- Housing: Die-cast aluminium
- Finish: black (RAL 9004) or white (RAL 9010)
- Operating temperature: Ta -10 to +45 °C (+14 to +113 °F)
- Dimensions (WxHxD): 141x146x112mm / 5.55"x5.75"x4.41"
- Weight: 1kg / 2.2lbs

INSTALLATION

- Suspension and fixing: track / hanging / ceiling installation

CERTIFICATIONS / REPORTS

- Compliance: CE, RCM, FCC, cTUVus

BOX CONTENT


- 1 x GALLERYWASHDATVW
- 1 meter cable with 3G0,75mmq power cable + 2x0,169 mmq DMX 120 Ohm (BARE END - already connected)
- User Manual

ACCESSORIES & RELATED PRODUCTS


▪ PLCPW7500D65B/W	Power PVC cable H05VV-F 3G0,75, 1 meter length, black/white	▪ ECLPENDWALLBRKBK/WH	Wall mounting bracket for ECLPENDANT series, black/white
▪ PPBAG02	Waterproof and rugged Polypropylene case, 414x345x174 mm for GALLERYWASH and ECLPARDOT	▪ ECLPENDWALLBRKABK/WH	Ring adapter for ECLPENDWALLBRK (not included), black
▪ GWASHDATFILT30/80	Light diffusion filter for GALLERYWASHDAT series, symmetric 30°/80°	▪ GWASHDATWK	CRMX Timo Rx kit for GALLERYWASHDAT series
▪ GWASHDATWMBRKB/W	Wall mounting bracket for GALLERYWASHDAT series, black/white	▪ PLCDX53D5	120 Ohm DMX cable, 2 twisted poles, external sheath with reduced diameter, 1 m
▪ GWASHDATBDB/W	Barn door with 4 directional flaps to adjust the light beam for GALLERYWASHDAT, black/white	▪ PLCPD7501P68D	Power & DMX 120 Ohm
▪ GWASHDATHSNOOTB/W	Half snoot for GALLERYWASHDAT series, black/white	▪ PLCPD7501P14D	Power & DMX 120 Ohm, 1 meter length, not suitable for track adapter connection
▪ GWASHDATB8DBW	Barn door with 8 directional flaps to adjust the light beam for GALLERYWASHDAT, black/white	▪ PLCYA7501P14D	YY splitter cable Power 3x0.75 mm ² + 5p IN/OUT DMX 120 Ohm, bare end, 1 meter
▪ GWASHDATCEILKITB/W	Ceiling-mounted kit (surface) for GALLERYWASHDAT series, black/white	▪ C6002B	Slim aluminium clamp, 200 kg loading, 48-51 mm tubes, M10 bolt
		▪ RSR0630B	Steel security cable for hanging bodies, inox steel shackle, L=60 cm, black
		▪ UPBOXPRO	Firmware uploader kit, USB IN, 5-pin XLR DMX OUT connector

PRESET 5600K

Beam angle 50%: 86,3°

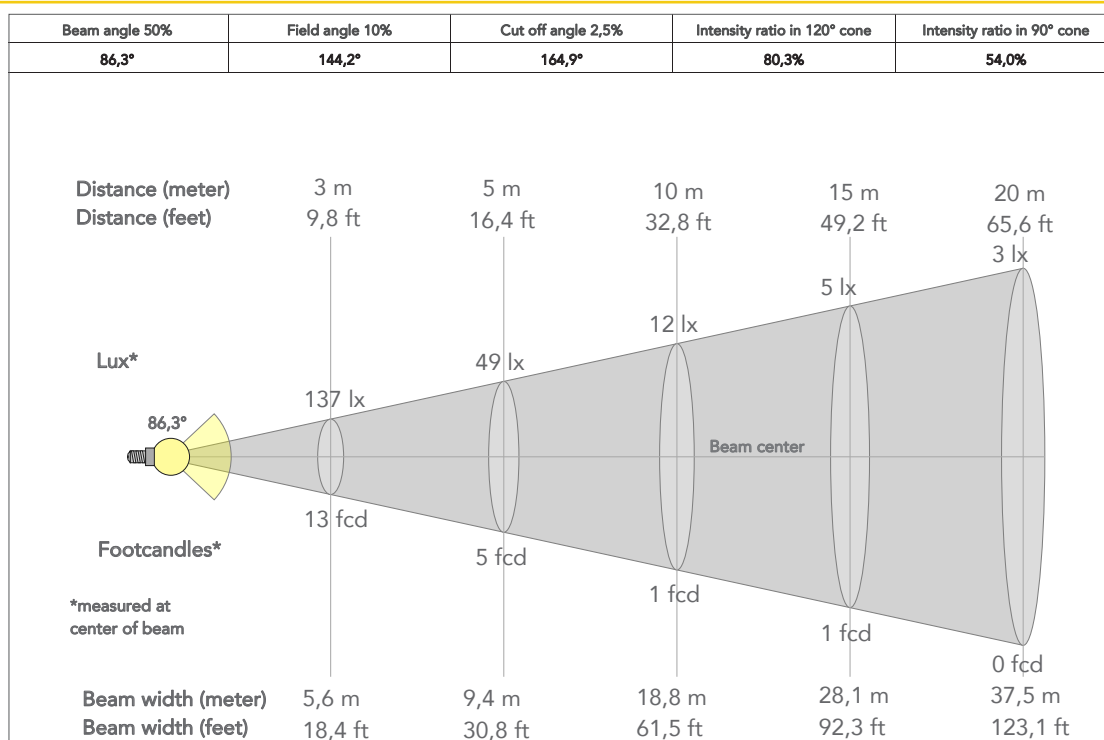

TECHNICAL DRAWINGS

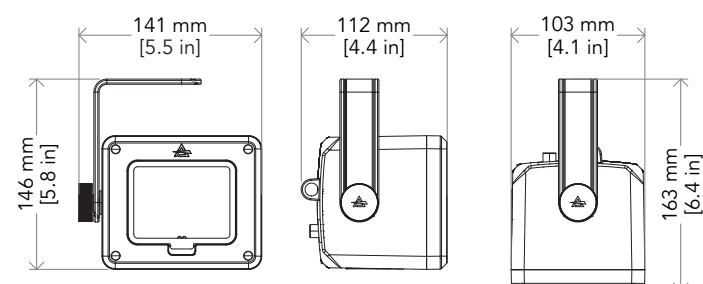

CERTIFICATIONS / APPROVALS



Conforms to UL STD. 1573
Certified to CSA STD: C22.2 NO. 166

Visit our website for specifications and tech documentations



MUSIC & LIGHTS S.r.l.

Via A. Olivetti, sn
04026 - Minturno (LT) ITALY

info@prolights.it
Tel: +39 0771 72190

prolights.it
VAT No. IT 02057590594